


Familiarising yourself with your Bread Master Select

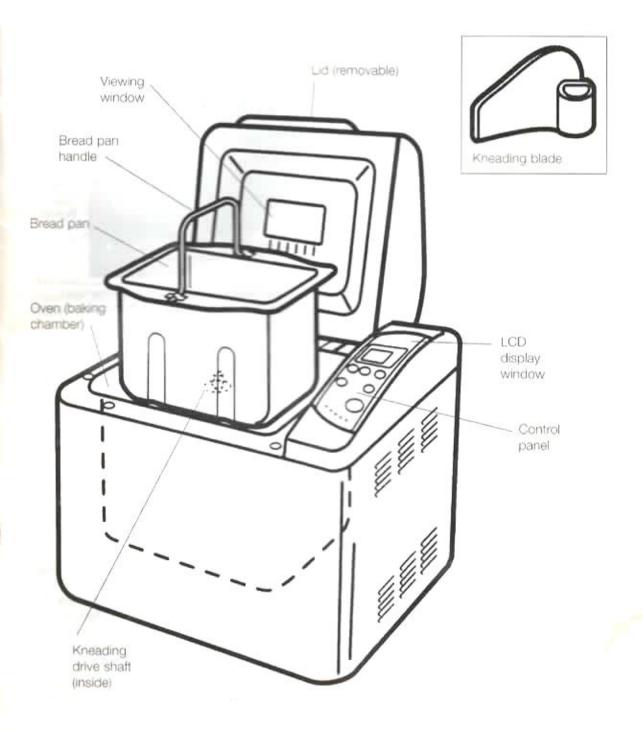

Main features of the control panel LCD Display Normal/ Breville Window Rapid The control panel is designed to perform several Bake functions. The LCD display indicates completion 883 83 Loaf Size Indicator time and the settings selected. The various Indicator buttons are used to set the functions and to start the bread maker. The buttons should be pressed Select Button firmly. A soft "beep" sound is made as a button is pressed and the function advances. Preset Timer (up/down) buttons Automatic Loaf Settings Size Crust Colour Button Button Stop/ Start Progress Indicator Button Lights

DISPLAY The display window displays the selected cycle and crust colour selections, normal/rapid WINDOW bake mode as well as loaf size. When the START/STOP button is pressed the time displayed (in hours and minutes) is the time remaining until the selected setting is completed. Press this button to select the 14 automatic settings available. These settings are listed on SELECT Page 6 and 7 "Bread and Dough Setting Selections". Each time the SELECT button is pressed the setting is changed. The setting selected is shown on the Display Window as a number between 1 to 10. CRUST Press the CRUST button to select the 3 crust colour settings available for the bread settings only. The setting selected is indicated on the display window below the setting. The LCD below 'MEDIUM' is initially lit. To choose either 'DARK' or 'LIGHT', press the CRUST button until the LCD is lit under the preferred setting. LOAF Press the LOAF button to set the required loaf size. It is initially selected to 1kg. If the 750g loaf is preferred, press the button again and the display will indicate the change. Note: The LOAF button is only effective with the BASIC, SWEET, FRENCH and WHOLEWHEAT settings. TIMER For use when setting the TIMER to delay baking. Press the Up and Down Arrows (which will move time up or down in 10 minute increments) to preset the programmable timer. (Refer page 8) Holding the arrow buttons down will advance or reverse the time setting quicker. START/ Press the START/STOP button to commence the selected program or begin timer countdown STOP for delayed operation. To stop and cancel the Bread Master Select in mid-cycle the START/STOP button must be pressed down and held for 5-10 seconds until the machine beeps and the display window is reset. This will result in the program being cancelled. (When the bread is ready the Bread Master Select automatically stops and sounds 3 double beeps. The time Display will indicate "0:00", Press the 'START/STOP' button to turn off the power). DO NOT PRESS 'START/STOP' when checking the bread as this will cancel the cycle. The machine will not continue operation.

PROGRESS The various stages of the bread making process are shown. As the bread maker moves INDICATOR through each stage, an indicator light will flash to indicate the progress of the setting selected.

Bread and Dough Setting Selections

SETTING 1. BASIC

Normal

Press the 'SELECT' button once and the Display Window will show "1" (Basic bread, Medium crust colour, 1kg loaf).

Rapid

Press the "SELECT" button twice and the Display Window will show "1" (Basic Rapid bread, Medium crust colour, 1kg loaf).

This setting has shorter kneeding and rising times therefore the bread will be lower in height, heavier in texture and with less flavour development.

SETTING 2. FRENCH

This setting is suitable for breads lower in fat and sugar as the rising times are longer and the baking temperature higher it will produce a coarser crumb with a harder, cruster crust.

Normal

Press the 'SELECT' button three times and the Display Window will show "2" (French bread. Medium crust colour, 1kg loaf).

Rapid

Press the 'SELECT' button four times and the Display Window will show "2" (French Rapid bread, Medium crust colour, 1kg loaf).

This setting has shorter kneading and rising times therefore the bread will be lower in height, heavier in texture and with less flavour development.

SETTING 3. SWEET

This setting is suitable for sweeter style breads as the rising times are longer and the baking temperature lower.

Normal

Press the 'SELECT' button five times and the Display Window will show "3" (Sweet bread, Medium crust colour, 1kg loaf).

Rapid

Press the 'SELECT' button six times and the Display Window will show "3" (Sweet Rapid bread, Medium crust colour, 1kg loaf).

This setting has shorter kneading and rising times therefore the bread will be lower in height, heavier in texture and with less flavour development.

SETTING 4. WHOLEWHEAT

Normal

Press the 'SELECT' button seven times and the Display Window will show "4" (Wholewheat bread, Medium crust colour, 1kg loaf).

Rapid

Press the 'SELECT' button eight times and the Display Window will show "4" (Wholewheat Rapid bread, Medium crust colour, 1kg loaf).

This setting has shorter kneading and rising times therefore the bread will be lower in height, heavier in texture and with less flavour development.

SETTING 5. YEAST FREE

Press the 'SELECT' button nine times and the Display Window will show "5" (Yeast Free). The crust colour and loaf size are not selected when using this setting.

As this setting is used for breads which contain a quick-acting leavening agent in place of yeast, they will not rise as high as traditional yeast breads. Recipes for this cycle can be found in the 'Yeast Free' section of this book.

SETTING 6. BAKE ONLY

Press the 'SELECT' button ten times and the Display Window will show "6" (Bake Only).

This setting is designed to extend the baking time if extra baking is required, for those who enjoy a compiler crust. Or for added interest to your loaf try the delicious topping or melt idea on page 9.

SETTING 7. DOUGH

Press the 'SELECT' button eleven times and the Display Window will show "7" (Dough). This cycle takes 1 hour 30 minutes to complete. Remove the dough from the Bread Master Select, hand shape, then bake in a conventional oven.

SETTING 8. PIZZA DOUGH

Press the 'SELECT' button twelve times and the Display Window will show "8" (Pizza Dough).

This cycle takes 1 hour to complete. Remove the dough from the Bread Master Select, roll out with a rolling pin onto a lightly floured surface and top with your favourite toppings, then bake in a conventional oven. Special instructions and recipes for Pizza and Focaccia are included in the 'Pizza Dough' section of this book.

SETTING 9. PASTA

Press the 'SELECT' button thirteen times and the Display Window will show "9" (Pasta).

This cycle takes 1:20 minutes to complete.
However, the dough can be removed after 15 minutes, if a more pliable texture is preferred.
Remove the dough from the Bread Master Select, either hand shape or process through a pasta extruder. Recipes for pasta are included in the 'Pasta Dough' section of this book.



If at any time you wish to check your bread setting selection simply press 'SELECT' and the corresponding number (1-10) will be displayed. Press 'SELECT' to return to the timer display. DO NOT PRESS STOP when checking bread as this will cancel the cycle. The machine will not continue operation.

SETTING 10. JAM

Press the 'SELECT' button fourteen times and the Display Window will show "10" (Jam).

This setting is designed to produce home made style jam, using seasonal fresh fruit. A variety of recipes can be found in the 'Just Jam' section of this book.



Both Crust Colour and Loaf Size can be changed for the first 4 settings, ie. Basic, French, Sweet and Wholewheat. When the bread setting is chosen, the Crust Colour defaults to Medium and the Loaf Size to 1kg. See 'Main Features of the Control Panel' for details on how to change these if required, after the setting has been selected.

Power Failure Protection Function

The Bread Master Select has a built in Power Failure Protection Function. If the power supply to the Bread Master Select is interrupted for less than 15 minutes, the Bread Master Select will automatically resume when power is restored.

For the power failure protection function to be implemented the machine must first be operating for a minimum of 5 minutes (if the charging time is less than 5 minutes the machine may not reset when the power is restored).

If the power is not restored after 15 minutes it is recommended that the ingredients be discarded, particularly if you have used perishables, dairy products, etc.

How to use the preset timer

The Bread Master Select preset timer allows you to wake up to the aroma of fresh baked bread in the morning. The preset timer allows you to set the timer up to 15 hours in advance before you require your baked loaf.

To preset the timer use the A T arrows on the control panel to enter the number of hours in which you want your bread to be ready (the amount of time shown on the display panel will include the baking time).



Recipes using penshable ingredients is, milk, thus, butter etc. should not be made using the timer.

To use the timer:

Step 1.

To bake a lost of bread on the Basic Normal/ Medium 1kg (setting 1) using the preset timer lost the steps 1 to 9 under the heading Beginners Guide to Baking your First Loaf' on pages 10 and 11.

Step 2

Before pressing the 'START/STOP' button, press the timer button; "3:10" will be displayed, when the Basic Normal/Medium/1kg setting is selected. (If other settings are selected, the time to be displayed will be different.) This means the bread will be ready in 3 hours and 10 minutes. Continue to press the timer button to increase the amount of time between now and when you want the bread to be ready. Each time you press the timer button the timer advances 10 minutes. Each time you press the timer button the timer is set back 10 minutes. Hold down the arrow button for a speedier adjustment.



If you wish to re-program for another time, or you accidentally press the START/STOP button, press and hold the START/STOP button to cancel, then repeat the above steps.

Step 3

Press 'START/STOP' and the timer will begin to count down. The timer light begins to flash, letting you know the timer has started. It will start to knead the dough 3 hours and 10 minutes before the desired completion time. The remaining time will count down in one minute increments. When the time display indicates '0:00', baking is complete.

Example

The present time is 9:00pm and you want to wake up to the aroma of fresh homemade bread at 6:30am tomorrow morning. It is 9 hours and 30 minutes from now until

6:30a.m. Your should therefore set the timer to 9 hours and 30 minutes - "9:30".





The programmable timer can not be used for the following modes - Sweet, Rapid Bread, Bake Only, Dough, Pizza Dough, Pasta and Jam. Individual recipes will specify if not suitable.

If you make an error during or after your selection, press and hold the 'START/STOP' button to cancel.

Using the Yeast Free Setting

The YEAST FREE setting of the Bread Master Select allows you to make breads, such as banana bread, that use quick-acting leavening agents, usually baking powder or baking soda, instead of yeast.

The Ingredients need to be prepared BEFORE loading into the bread pan, and as follows:

- Cut the butter into small chunks. Make sure it is soft.
- Pre-stir the eggs and combine with any other liquid.

Fully mix the dry ingredients together in a separate bowl.

Place the ingredients into the bread pan in the same order as indicated above. Press the 'SELECT' button 9 times to reach the YEAST FREE mode. Press the 'START/STOP' button. The unit will begin mixing. Baking will be completed after 2 hours.

Using the Bake Only Setting

The BAKE ONLY setting of the Bread Master Select gives more versatility to your bread making.

The BAKE ONLY setting is useful when wishing to:

- Extend the baking time if a darker, crisper loaf crust is required.
- Crispen loaves already baked and cooled
- Rewarm loaves already baked and cooled
- Delay-bake a finished dough
- Melt or brown toppings

To operate, press the 'SELECT' button ten times and the display window will show "6" (BAKE ONLY). The time can be altered by using the and times range from 10 minutes to 4 hours. The Crust Colour can be adjusted on this setting if required. It defaults to Medium.

Try this creative idea from our test kitchen

- Combine 3 tablespoons of cheddar cheese, 3 tablespoons chopped bacon with 2 teaspoons chopped fresh chives.
- When baking has completed, press the 'START/STOP' button.
- Sprinkle combined ingredients over the top of loaf.
- Select "10" (BAKE ONLY) setting, set time 20 minutes. Press 'START/STOP'. (If a browner, crisper melt is required. Set BAKE ONLY setting for additional time.)
- After baking, press 'START/STOP', Remove bread from Bread Master Select and bread pan. Allow to cool on a rack.

Using the Jam setting

- Place ingredients in the bread pan, fresh fruit first, followed by remaining ingredients.
- Select "10" (JAM) setting. Press START/STOP!.
- After 1 hour and 50 minutes, the bread maker will BEEP, indicating the end of the cycle. Press "START/STOP".

Using oven mitts, remove the bread pan.

 Pour the hot jam into warm, dry sterilised jars, leaving 1.25cm from the top of the jar.
 Seal immediately and label. Jam will thicken upon cooling and storage.

See the recipe section, under 'Just Jam' for more details.



During the Jam cycle the 'knead' and 'bake' indicator lights will flash alternately.

Beginner's Guide to Baking Your First Loaf

The following instructions are to be used when making Bread or Dough recipes from the recipe section of this book.

All recipes use local ingredients and Australian Standard Metric Measuring tools (cup, spoons and kitchen scales), for accuracy in producing 750g and tike loaves of bread.

Basics and your first loaf, remove any sockers from the Bread Master Select Do not remove the Bread Master Select anyour machine. We recommended you see the inside of the bread pan and kneading table in warm soapy water, rinse and dry thoroughly



Do not immerse the bread pan in water.

Open the lid and remove the bread pan.

To remove the bread pan, grasp both sides of



the handle and turn anti-clockwise (in the direction of the arrow marked "Remove"). Always remove bread pan from the Bread Master Select before adding ingredients to ensure no ingredients are split into the baking chamber and on the element.

Attach the kneading blade to the drive shaft in the bread pan.



- It is important that the kneading blade is properly mounted on the shaft in the base of the bread pan by aligning the flat edge on the inside of the kneading blade with the flat side of the shaft.
- If the blade is not seated correctly it could come off in the

dough or ingredients may not be mixed and kneaded properly. (Before inserting the kneading blade ensure that there are no crumbs attached to the shaft inside the bread pan or inside the hole in the kneading blade.)

Put the ingredients into the bread pan in the following order.


1st. Liquid ingredients ie, water

2nd. Fat ie. oil

3rd, Salt

4th. Dry ingredients ie. flour, sugar

5th. Yeast

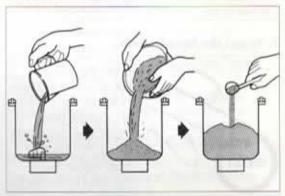

- It is most important that the ingredients are added in the correct order listed in the recipe and that they are measured and weighed accurately, or the dough will not mix correctly or rise sufficiently.
- All ingredients should be at room temperature (21-27°C). (When the room temperature is below 18°C, use lukewarm water to assist the yeast fermentation).
- Hollow out the centre of the flour and place the yeast there. If the yeast contacts the water before kneading, the bread may not rise as well.

4. Return the bread pan to the machine



- Wipe down the outside of the bread pan to remove any spillage.
- Ensure the bread pan is inserted completely as follows:
- Lower the bread pan into the machine, with

- the side marked "Remove" at a 45° angle to the front.
- 2. Turn the bread pan to the right until it locks into place.

5. Close the lid.

 Do not open the lid during operation except to check the consistency of the dough while kneading, to add fruit/nuts when the 'BEEP' sounds, or to glaze the loaf 5 minutes before the end of the baking cycle.

6. Plug in the bread maker

- Plug into a 230/240V outlet. Switch on at the power outlet.
- The display should blink as "0:00" when the power is on.

7. Select the bread mode



Press the 'SELECT' button until the display indicates the appropriate bread mode. For basic white bread, "1", Medium crust colour, 1kg is indicated in the display window.

8. Select the crust colour

Press the 'CRUST' button until the display



indicates the appropriate colour selection. When the bread mode is selected. crust colour defaults to Medium, Press 'CRUST' button once for Dark and twice for Light.

9. Select the loaf size



 The loaf size is initially selected at 1kg, If you want to select he 750g mode, press the 'LOAF' button once.

10. Start the bread maker

Press the 'START/STOP' button. The machine will begin kneading the dough and the KNEAD



indicator light will flash. The total time remaining until the cycle is completed will appear in the display window. The remaining time will "count down" in one minute increments.

 When the kneading cycle ends the bread will start to rise. The RISE indicator light will flash. Each cycle is indicated as the machine proceeds.

During the kneading cycle, the kneading NOTE! blade makes an irregular rotation. The blade turns quickly and then slowly, as it repositions the dough. This type of rotation improves the consistency of the dough and is a normal part of the kneading action.

- During the bake cycle steam may sometimes come out of the rear and side of the lid. The window may steam up.
- When the bread is finished baking, the machine will sound 3 double 'beeps' and the display window will read "0:00". The bread is now ready to remove.

11. Remove the bread pan



 After the machine beeps', press the 'START/STOP' button to turn the unit off. Remove the bread pan with oven mitts as it is very hot!

- Never set the hot bread pan directly on the body of the unit, tablecloth, plastic surfaces or other surfaces affected by heat
- If you do not wish to remove the bread



immediately, the Bread Master Select will automatically go into a "Keep Warm" setting, holding the temperature of the bread for up to 60 minutes (except on Dough settings).

12. Take the bread out of the bread pan

 Using oven mitts, turn the bread pan upside down and shake to loosen.




Try to remove the bread from the bread NOTE: pan as soon as possible. The crust can become moist and sticky if left in the bread pan to long.

- . If the bread is difficult to remove, slightly move the drive shaft on the bottom of the bread pan. Be careful as the bread pan could be hot!
- Set bread on a wire rack to cool. We recommend you allow the bread sufficient. cooling time before slicing as this ensures clean, even skces:
- If the kneading blade remains in the bread. remove it with a plastic or wooden utensil rather than your hand. The kneading blade could still be very hot.

13. Unplug the power supply cord after

- Always hold the plug when pulling the power supply cord out of the wall socket. Never pull on the power supply cord.
- Allow at least 1 hour for the Bread Master Select to cool down before using again, Leave

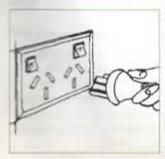

the lid up to help the machine cool down quicker. If the machine is too hot after use the Error code E:01 will appear in the display screen. Press 'START/STOP' to reset.

14. Cut the bread

- After the bread has cooled, cut the bread using a bread knife, electric knife or other serrated knife. A standard knife is likely to tear the bread.
- Always make sure the kneading blade is removed from the base of the baked bread loaf prior to slicing.

15. Store the bread

- Store the bread in plastic bags or a bread box.
- . To store for more than a few days place the bread in the refrigerator.
- Bread may be frozen for up to 1 month. Place into freezer bags, remove any air, and secure with ties.

Add-In Ingredient Beeper

The Bread Master Select features an 'Add Ingredient Beeper' which operates in the Basic, Basic Rapid, Wholewheat, Wholewheat Rapid, French and Sweet settings.

The machine will "BEEP" 8 times, approx 5 minutes before the end of the second knead, indicating the time to add any additional fruit, nuts, herbs, chocolate etc. required or as specified in the recipes.

The addition of ingredients at this time assists with keeping whole shapes.

While the machine is still kneading add the ingredients gradually in batches, allowing the dough to slowly combine with the ingredients. Take care not to drop ingredients over the side of the bread pan into the baking chamber, as these may burn and smoke during the baking cycle.

DO NOT PRESS THE 'START/STOP' BUTTON TO ADD INGREDIENTS AS THIS WILL RESET THE MACHINE.

Measuring Up

Baking bread is in part a science and each ingredient plays an integral role. Therefore care should be taken when weighing and measuring ingredients to obtain accuracy.

Metric Weighing Scales

For greatest accuracy and best results, a set of metric weighing scales should be used. Tare (zero) the scales with the container in position then spoon or pour ingredients in until desired weight is achieved. In general, water weighs the same in grams as it measures in millilitres, therefore greater accuracy is obtained by weighing.

Metric Measuring Cups and Spoons

When using the graduated METRIC measuring cups, it is important to spoon or scoop the dry ingredients loosely into the required cup. Do not tap the cup on the bench, or pack the ingredients into the cup UNLESS otherwise directed. Level the top of the cup with a knife. When using graduated metric measuring spoons, level top of spoon with a straight edged knife or spatula.

DO NOT USE TABLEWARE SPOONS OR CUPS.



Metric Liquid Measuring Jugs

When measuring liquids use a graduated metric measuring jug. Place jug on a flat surface, check for accuracy at eye level.

ALWAYS USE A STANDARD METRIC LIQUID MEASURING JUG.

Conversion Table

Metric Measurements	Mis
1 cup	250
1 tablespoon	20
1 teaspoon	5

Flour

Flour is the most important ingredient used for bread making it provides tood for the yeast and structures the lost when mixed with liquid, the protein in the lost strands, which interlock to the transport of easts strands, which interlock to the transport of the dough undergoes kneading and the dough with the structure sound to produce the weight and shape of the

The flour used in the Bread Master Select should be bread flour. Baker's flour or plain flour may be used. There is no need to sift the flour. Plain flour is most readily available, however best results are obtained with flour which has at least 11%-12% protein content. For this reason, all the recipes in this book use bread flour, which has a 12% protein content. This is normally indicated on the packaging. Do not use self-raising flour unless indicated in the recipe.

When using a low protein, stone ground or wholemeal flour the quality of the bread can be improved by adding 11/2 - 2 tablespoons of gluten flour, and reducing the original flour by the same quantity.

'Kitchen Collection' brand bread flour

This brand of bread flour is available nationally at larger supermarkets and was used for the development of most the recipes contained in this guide. It is a high protein, white bread flour, with a 12% protein content, ensuring a higher quality and consistency to the baked bread.

'Defiance' brand high grade plain flour

Also known as baker's flour, it is produced from hard wheats to give a protein level of at least 11.5%. This product is available in 1kg packets at least supermarkets.

Wholemeal flour

Contains all the bran, germ and flour of the whole grain. Although breads baked with this type of flour will be higher in fibre, the loaf will be lower in height and heavier in texture. A lighter textured bread can be achieved by replacing 1 cup of the wholemeal flour with white Bread Flour.

The Vital Ingredients

Rye flour

A popular flour used for bread making, it is low in protein and therefore it is essential to combine it with wheat flour to make bread successfully in the Bread Master Select. Rye flour is traditionally used to make Pumpernickel and Black Breads.

Gluten flour

Gluten is the complex protein product formed when wheat flour and water are mixed together. Gluten flour is a mixture of gluten and wheat flour and can improve the structure and volume of bread made from flour containing a low protein level.

Bread mixes

These convenient mixes contain bread flour, sugar, milk, salt, oil and other ingredients such as improvers. Usually only the addition of water and yeast is required. Brands such as 'Kitchen Collection', 'Defiance' and 'Old Grain Mill' bread mixes are available from major supermarkets. Recipes for these brand bread mixes are listed in the Easy Bake recipe section of this guide. For information on other brand mixes contact the manufacturer listed on the package.

Bread improver

Several brands of bread improvers are available nationally in supermarkets and health food stores. The ingredients in a bread improver are usually a food acid such as ascorbic acid (Vitamin C) or tartaric acid, plus other enzymes (amylases) extracted from wheat or barley flours.

Adding a bread improver will help strengthen the framework of the bread resulting in a loaf that is lighter in texture, higher in volume, more stable and with enhanced keeping qualities.

Bread improvers are an optional addition to the bread recipes listed in the Easy Bake recipe section of this book. 1 teaspoon is the recommended amount for a 750g loaf. A simple bread improver is a crushed unflavoured 250mg Vitamin C tablet added to the dry ingredients.

Sugar

Sugar provides sweetness and flavour, browns the crust and produces food for the yeast. White sugar, brown sugar, honey and dried fruits are all suitable to use. When using honey or golden syrup it must be counted as additional liquid. We have successfully tested SPLENDA as a sugar substitute.

Powdered milk

Milk and milk products enhance the flavour and increase the nutritional value of the bread. Powdered milk is convenient and easy to use (store in an airtight container in the refrigerator). Fresh milk should not be substituted for powdered milk unless stated in the recipe. Low fat or skim milk powder can be used with good results. Soy milk powder can also be used but produces a loaf with a higher density.

Salt

Salt inhibits the rising of the bread, so be careful when measuring as it should be accurate.

Fat

Fat adds flavour and retains the moisture, Butter, margarine or vegetable oil can be used.

Yeast

Without yeast the bread will not rise. Yeast needs liquid, sugar and warmth to grow and rise. Dried yeast has been used in all the recipes in this instruction book. Before using dried yeast always check the use by date, as stale yeast will prevent the bread from rising.

Tandaco' brand yeast, (available in most supermarkets) was used in the development of all recipes contained in this book. Some bulk and imported yeasts are more active, therefore it is recommended to use smaller quantities of these yeasts. Some yeasts are also more active in hot climates. For information on other brands of yeast in relation to quantities contact the manufacturer listed on the package.

Water

Cold tap water is used in all recipes. If using water in cold climates or from the refrigerator, allow water to come to room temperature. Extremes of hot or cold water will prevent the yeast activating.

Eggs

Eggs provide liquid, help with raising and increase the nutritional value. They help with flavour, tenderness and are usually used in the sweeter type of breads.

Other Ingredients

Fruit, nuts, chocolate chips etc. are added later (unless recipe specifies otherwise). When the first knead is complete, the machine will sound 8 short beeps, indicating it's time to add other ingredients (fruit, nuts, chocolate chips, etc.). If added before this stage, excessive kneading will cause the ingredients to break down, rather than hold their shape.



Always check the use by date of all ingredients, as out of date ingredients may prevent bread from rising.

Hints & Tips to better bread making

- Do check use by dates on ingredients.
- Do store opened ingredients in airtight containers.
- Do use ingredients at room temperature.
- Do use bread flour unless recipe states otherwise.
- Do measure ingredients accurately weighed measurements are in fact more accurate than volume measurements.
- Do use metric measuring cups, spoons and weighing scales.
- Do add ingredients to the bread pan in the order stated in the recipe
- Do add the salt with the liquid ingredients to prevent contact with the yeast.
- Do wipe out the machine and wash the bread pan and blade thoroughly after each use.
- X Don't use flour that contains a protein level of less than 11.5%. ie. Generic brands of plain flour.
- Don't use household cups and spoons for measuring.
- Don't use compressed yeast.
- Don't use hot water or liquids.
- X Don't use metal objects to remove the kneading blade from the cooked loaf of bread, as this may cause damage to the non-stick coating.
- Don't operate the machine if any ingredients have spilled over or around the element. Wipe away any spills first to prevent smoking occurring in the baking cycle.

Never use the delay timer setting in recipes that contain perishable items, such as eggs, cheese, cream and meats.

Never use self- raising flour to make yeasted unless recipe states otherwise.

Never immerse your bread machine in water.

Tip: When handshaping dough for rolls, weigh each piece of dough for more evenly sized rolls.

Tip: If you live in an area with a high altitude (above 900m) you will probably need to alter your bread recipe, as the higher the altitude, the lower the air pressure, the faster the dough will rise. Try reducing the yeast by 1/4 teaspoon, increasing the water by 20-40mls or using a more finely ground flour.

Tip: If the weather is not and humid, reduce the yeast by 1/4 teaspoon to avoid over rising of the dough.

IMPORTANT BREADMAKING COOKING TIP

Seasonal variations in flour properties (or effects of storage) and/or effects of warmer weather can effect the results of your bread.

It may be necessary to adjust the water and yeast amount in the recipes contained in this booklet to compensate for these effects.

This is especially important if the weather is hot and humid as ingredients such as yeast become more active. This can result in the bread rising too much and hitting the top of the lid.

It is recommended you adjust the recipes as follows:

Reduce the water quantity in the recipe to be prepared by 20-40mls and reduce the yeast by 1/4-1/2 teaspoon.

Tip: Usually by checking the dough in the first seven minutes of kneading will indicate an imbalance between water and flour - if too dry add 1-2 teaspoons water extra or if the dough is sticky add up to a tablespoon of extra flour. The dough should be forming into a smooth, round ball.

An imbalance in the yeast may not be apparent until the dough has started into the 3rd rise or bake cycles. Make note to reduce the yeast in the preparation of your next loaf of bread.

Questions and Answers

About Ingredients:

Q: Can different size loaves be made in this machine?

A: The recipes in this manual are sized so that the dough is kneaded properly and the finished bread does not exceed the bread pan capacity. Use only ingredients with similar quantities of ingredients.

Q: Can fresh milk be used instead of dry milk?

A: Yes - but not when using the preset timer. Bread made with fresh milk will have a heavier texture than bread made with milk powder. The milk has to be scalded and cooled before adding to the other dough ingredients. Substitute the water with fresh milk and omit the milk powder.

Q: Can butter or margarine be used in place of oil?

A: Yes, but the bread crumb may appear a more creamy, yellow colour.

Q: Can other sweetening agents be used in place of sugar?

A: Yes - honey, golden syrup or brown sugar can be used. Do not use artificial sweeteners. However the brand SPLENDA was successfully tested during recipe development. When substituting honey or similar sweet liquids for sugar, reduce the water by the same amount.

Q: Can salt be omitted?

A: Salt plays a very important part in bread making. Omitting it will decrease water absorption in the dough, as well as affect mixing, the strength of gluten development and the fermentation of the yeast. In the finished bread, salt improves the loaf shape, crumb structure and crust colour, as well as extending shelf life and enhancing flavour.

Q: Why do the ingredients need to be placed into the pan in the specified order?

A: To ensure all dry ingredients are mixed with water and to avoid the yeast activating prematurely with the water when using the preset timer.

About Baking Bread:

Q: The bread cycle has been accidentally cancelled/reset during the bread making process. What can I do?

A: If the power is accidentally turned off for 15 minutes or less during the bread making cycle, your Bread Master Select has a Power Failure Protection function. This will automatically resume bread making when power is restored.

If the cycle can not be resumed or is cancelled:

During the Kneading stage - Reselect the bread setting again and allow dough to re-knead and continue through the baking process. The result may be a loaf higher in volume and lighter in texture.

During the Rising stage - Turn the machine off. Leave the dough in the pan and in the baking chamber with the lid closed. Allow the dough to prove up in size until almost near the top of the pan. Turn the machine on. Select the BAKE setting, set time for 50-55 minutes. Press the START/STOP button.

During the Baking cycle - Select the BAKE setting. Set required baking time (between 5 to 55 minutes), Press the START/STOP button.

Q: What happens if the bread isn't removed when the bake cycle is complete?

A: As the loaf cools it gives off stream which can't escape from the bread pan. The bread crust may become soft and the loaf may lose its shape.

Q: Why did the bread not rise?

A: There may be several reasons. Check the protein level of the flour and the use by date of the yeast. The yeast may have failed to activate, the yeast measurements may be inaccurate or sometimes people just forget to add the yeast.

Q: Why do large holes appear inside the bread?

A: Occasionally air bubbles will concentrate at a certain location during the last rising and will bake in that state. Check the recipe ingredients and method of weighing/measuring.

Q: Why does the kneading blade stay inside the bread when it is removed from the bread pan? Is this normal?

A: Yes - This is usually caused by the crispiness of the crust. To locate the blade use a non-abrasive utensil and avoid damaging the non-stick coating of the blade. Use a dry thick cloth to remove the blade as it will be not.

Q: Why does the top of the bread collapse?

At Usually this is because the ingredients are not in balance or a low protein flour is used. Check the method of weighing/ measuring the ingredients. Too much yeast, water or other liquid ingredients, or not enough flour may cause the bread to be pale on top and collapse when baking.

Seasonal variations in flour properties (or effects of storage) and/or effects of warmer weather can effect the results of your bread.

It may be necessary to adjust the water and yeast amount in the recipes contained in this booklet to compensate for these effects.

This is especially important if the weather is hot and humid as ingredients such as yeast become more active. This can result in the bread rising too much and hitting the top of the lid.

It is recommended you adjust the recipes as follows:

Reduce the water quantity in the recipe to be prepared by 20-40mls and reduce the yeast by 1/4 - 1/2 teaspoon.

Q: Why does bread colour differ?

A: This is probably because the ingredients in each recipe differs. A different crust colour may also have been selected.

Q: Are the room and water temperatures important?

A Yes - room and water temperature influences activity and therefore can affect the quality bread. The average room temperature is accountable 21-27°C. Room temperature water should also be used. However if the room temperature is higher than average, cool water should be used.



we use hot water, as it will kill the yeast.

About Using the Timer:

Q: Why can't the preset timer be set past 15 hours?

A: The ingredients may deteriorate in quality or ferment if they are left inside the bread pan for many hours. This is especially the case during summer, when the timer should be set to a shorter period of time.

Q: Why can't some ingredients be used with the preset timer?

A: Most protein foods, such as milk, cheese, eggs, bacon etc., are perishable and will deteriorate if left unrefrigerated for more than one hour.

Troubleshooting - Recipe

	Problem	Bread sinks in centre	Over browned	Sticky patch on top of bread		dense	Coarse holey texture		Bread doesn't rise enough	Corrective Action	Ref.
Flour	Not measured correctly	•			•	·		•	•	Use metric weighing/ measuring devices. See 'Measuring Up' for more detail	pg13
	Low Protein %	•			•	•				Use high protein flour. See 'The Vital Ingredients' for more detail	pg14
	Past sell-by date					•			•	Use fresh flour	
	Self raising flour used	•								Use high protein bread flour. See 'The Vital Ingredients' for more detail	pg14
Sugar	Not measured correctly	•	•	•				*		Use metric weighing/ measuring devices	pg13
Salt	Not measured correctly					0	4			Use metric weighing/ measuring devices	pg13
Water Liquid	Not measured correctly			•		*		•	•	Use metric weighing/ measuring devices. See 'Measuring Up' for more detail	pg13
	Too hot/ Too cold									Water must between 20° -25°C	
Yeast	Not measured correctly	•		•	*	•		*		Use metric weighing/ measuring devices. See 'Measuring Up' for more detail	pg13
Bread Mix	Not measured correctly	•		•	•	•		•		Use metric weighing/ measuring devices. See 'Measuring Up' for more detail	pg13
	Used in place of flour		•							Bread mix must only be used when following specific recipe for mixes.	
Dried fruit, nuts & herb	Not released into dough					•		•		Add when machine beeps, later into the cycle	pg12
Room temp	Too hot									Room temp must be less than 28°C	
	Too cold									Room temp must be more than 10°C	

Troubleshooting - Machine

Machine	Machine will not operate	E:01 on	Ingredients not mixed	not	Bread rises too much	Crust under browned	Programmable timer did not function	Bread not sufficiently baked	Loaf is small
Unit unplugged									
Kneading blade not on shaft			•						
Select setting incorrect									
Power disruption				•					
Start/Stop button pressed after starting machine			*	•				* 1	
Machine has not cooled from previous use		•							
Lid opened during rising or baking						•		•	
Hot bread left in pan too long									
Incorrect crust colour selection						•			
Start/Stop button not pressed	*						•		
Bread pan unseated				٠					

Control Panel Messages

Control Panel Messages - Error Detection

When the 'START/STOP' button has been pressed to begin the baking process and there is a problem relating to the sensor, the machine will beep twice and then flash the particular error message specific to the problem.

Error Message	Problem	Correction
E:01	If the bread maker is used shortly after a previous loaf has been baked, its interior will be warm, ie, the sensor temperature will still be above 40°C.	Press 'START/STOP' to enter reset mode. Open the lid and remove the bread pan to cool. Always allow the unit sufficient time to cool before using again.

 
Care, Cleaning and Storage

Care, Cleaning and Storage

Before cleaning your Bread Master Select. remove the plug from the power outlet and allow the unit to cool completely

Machine

The body and the lid should be wiped over with a soft damp cloth and warm soapy water.



If overspills such as flour, nuts, sultanas etc. occur in the baking chamber, carefully remove, using a damp cloth. Wipe dry before using next. Before re-using your Bread Master Select make certain that all parts are completely dry.

Bread pan and kneading blade

The bread pan and kneading blade of the Bread Master Select are coated with a high quality non-stick coating.



As with any non-stick coated surface NOTE! NEVER use metal utensis or abrasive cleaners on these items.

To clean the bread pan: Fill half way with soapy water (use a non-abrasive detergent), let sit for 10-20 minutes. Remove the kneading blade and clean both blade and inside of pan using a sponge or cloth. Be sure to remove any crust or dough that may become lodged around/underneath the blade and around the

The bread pan should NOT be immersed in water. Take care not to scratch the non-stick surface on the inside of the pan and the kneading blade. Never use a hard substance, like a brush to wash them.

- Dry the kneading blade and bread pan thoroughly.
- Do not use harsh cleaners, abrasives or steel
- Never wash the bread pan or kneading blade in the dishwasher.



Some discolouration may appear in the bread pan over time. This is a natural effect NOTE! caused by moisture and steam and will not affect the bread in any way.

Non-stick coating

Both the blade and bread pan coating are operating parts of the machine and as such are subject to normal wear and tear over the life of the machine. Depending on your usage of the bread machine they may need replacement if the bread begins to stick.


Replacement parts are available from Breville Spare Parts:

CALL

(02) 9381 8195 (Sydney Metropolitan callers) 1800 257 196 (For the rest of Australia) New Zealand customers - call Kenwood Appliances Ltd (09) 828 1409

Storage

When storing your Bread Master Select ensure the unit is completely cool, clean and dry. Place the bread pan and kneading blade into the baking chamber and close the lid. Do not place heavy objects on the lid top. Store the unit upright.

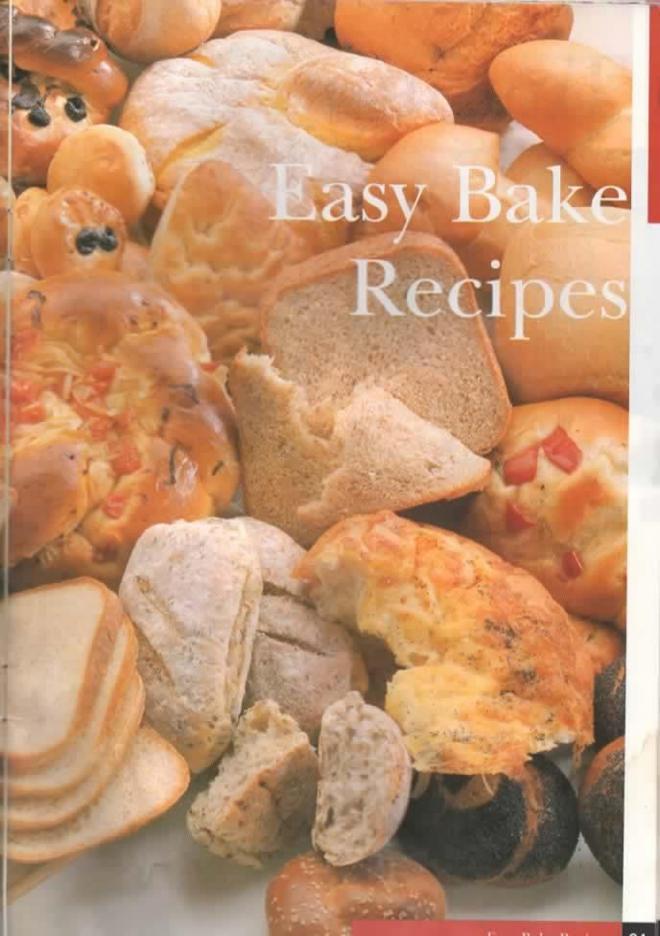

Traditional



Favourites

There is a favourite flavoured bread that we all like to place in our lunch box. This section includes a variety of those favourites made from all natural ingredients. After tasting all of these recipes, you just might discover a new found favourite.

PROCEDURE

- Place ingredients into the bread pan, in the exact order listed in the recipe.
- 2. Wipe spills from outside of bread pan.
- Lock the bread pan into position in the baking chamber and close the lid.
- Press 'SELECT' to the desired setting as specified in recipes below.
- 5. Press 'START'.

At the end of the program, press 'STOP'. Remove bread from Bread Master Select and bread pan. Cool on rack.

Basic White

CHART SHOWING SEQUENCE FOR REGULAR CYCLE SETTING

LIGHT	1st knead	2nd knead	1st rise	Punch down	2nd rise	Bake	Total Time: 750g - 2:50hrs 1kg - 3:00hrs.
MEDIUM	1st knead	2nd knead	1st rise	Punch down	2nd rise	Bake	Total Time 750g - 3.00hrs 1kg - 3.10hrs
DARK	1st knead	2nd knead	1st rise	Punch down	2nd rise	Bake	Total Time 750g - 3.10hrs 1kg - 3.20hrs

ADD-IN BEEP: The Bread Master Select beeps 8 times, 5 minutes before the end of the second knead. Extra ingredients, such as fruit, nuts etc. should be added at this point.

CHART SHOWING SEQUENCE FOR RAPID CYCLE SETTING

LIGHT	1st knead	1st rise	Punch down	2nd rise	Bake	Total Time: 750g - 2.20hrs 1kg - 2.30hrs.
MEDIUM	Tst knead	1st rise	Punch down	2nd rise	Bake	Total Time 750g - 2.30hrs 1kg - 2.40hrs
DARK	1st kneed	1st rise	Punch down	2nd rise	Bake	Total Time 750g \ 40nrs 1kg - 2.50hrs

To use the Rapid setting on specified recipes in this section both the salt and yeast quantities will need to be modified, as indicated below.

Salt	Decrease by 1/2 teaspoon
Yeast	Increase by 1/2 teaspoon

These modifications are applicable to both loaf sizes le, 750g and 1kg. The Rapid setting allows you to choose from Light, Medium or Dark crust colour.

Best results are achieved by using the longer settings, producing a loaf with optimum texture and NOTE: greater keeping qualities.

Water Oil Salt Sugar Bread flour Milk powder Bread Improver Tandaco yeast	1kg 370ml 3 tablespoons 2 teaspoons 2 tablespoons 600g/ 4 cups 2 tablespoons 1 teaspoon	750g 300ml 2 tablespoons 1³/₄ teaspoons 2 tablespoons 450g/ 3 cups 2 tablespoons 1 teaspoon 1 ¼ teaspoons
---	--	---

SETTING:

BASIC or RAPID: Light, Medium or Dark

French Bread

CHART SHOWING SEQUENCE FOR REGULAR CYCLE SETTING

LIGHT	1st knead	2nd kneed	1st rea	Punch down	2nd rise	Bake	Total Time: 750g - 3,30hrs 1kg - 3,40hrs.
MEDIUM	1st knead	2nd knead	1st rise	Punch down	2nd rise	Bake	Total Time 750g - 3.40hrs 1kg - 3.50hrs
DARK	1st knead	2nd knead	1st nse	Punch down	2nd rise	Bake	Total Time 750g - 3.50hrs 1kg - 4.00hrs

ADD-IN BEEP: The Bread Master Select beeps 8 times, 5 minutes before the end of the second knead. Extra ingredients, such as fruit, nuts etc. should be added at this point.

CHART SHOWING SEQUENCE FOR RAPID CYCLE SETTING

UGHT	1st knead	1st rise	Punch down	2nd ree	Bake	Total Time: 750g - 2.40hrs 1kg - 2.50 hrs
MEDIUM	1st knead	1st rise	Punch down	2nd rise	Bake	Total Time: 750g - 2.50hrs 1kg - 3.00hrs
DARK	1st knead	1st rise	Punch down	2nd rise	Bake	Total Time: 750g - 3.00hrs 1kg - 3.10hrs

To use the Rapid setting on specified recipes in this section both the salt and yeast quantities will need to be modified, as indicated below.

Salt	Decrease by 1/2 teaspoon
Yeast	Increase by 1/2 teaspoon

These modifications are applicable to both loaf sizes ie. 750g and 1kg. The Rapid setting allows you to choose from Light, Medium or Dark crust colour.

Best results are achieved by using the longer settings, producing a loaf with optimum texture and NOTE! greater keeping qualities.

Water Oil Salt Sugar Bread flour Bread improver Tandaco yeast	1kg 370ml 3 teaspoons 2 teaspoons 1 tablespoons 600g/ 4 cups 1 teaspoon	750g 300ml 2 teaspoons 2 teaspoons 3 teaspoons 450g/ 3 cups 1 teaspoon 11/4 teaspoons
---	---	---

SETTING:

FRENCH or RAPID: Light, Medium or Dark.

100% Wholemeal Bread

CHART SHOWING SEQUENCE FOR REGULAR CYCLE SETTING

LIGHT	1st knead	2nd knead	1st rise	Punch down	2nd rise	Bake	Total Time: 750g - 4.00hrs 1kg - 4.10hrs.
MEDIUM	1st knead	2nd knead	1st rise	Punch down	2nd rise	Bake	Total Time 750g - 4.10hrs 1kg - 4.20hrs
DARK	1st knead	2nd knead	1st rise	Punch down	2nd rise	Bake	Total Time 750g - 4.20hrs 1kg 4.30hrs

ADD-IN BEEP: The Bread Master Select beeps 8 times, 5 minutes before the end of the second knead. Extra ingredients, such as fruit, nuts etc. should be added at this point.

CHART SHOWING SEQUENCE FOR RAPID CYCLE SETTING

LIGHT	1st knead	2nd knead	1st rise	Punch down	2nd rise	Punch	3rd rise	Bake	Total Time: 750g - 3,10hrs 1kg - 3,20 hrs
MEDIUM	1st knead	2nd knead	1st rise	Punch down	2nd rise	Punch	3rd rise	Bake	Total Time: 1 750g - 3.20hrs 1kg - 3.30hrs
DARK	1st knead	2nd knead	1st rise	Punch down	2nd rise	Punch	3rd rise	Bake	Total Time: 750g - 3.30hrs 1kg - 3.40hrs

INGREDIENTS:	1kg	750g
Water	370ml	320ml
Oil	3 tablespoons	2 tablespoons
Salt	2 teaspoons	11/2 teaspoons
Sugar	3 tablespoons	21/2 tablespoons
Wholemeal plain		
flour	600g/ 4 cups	450g/ 3 cups
Gluten flour	21/2 tablespoons	2 tablespoons
Bread Improver	1 teaspoon	1 teaspoon
Milk powder	2 tablespoons	2 tablespoons
Tancisco veast	2 teaspoons	11/s teaspoons

SETTING:

WHOLEWHEAT: Light, Medium or Dark

Milk Bread

INGREDIENTS:

Full cream milk,

scalded & cooled

Oil

Salt Sugar Bread flour Bread improver Tandaco yYeast 1kg

370ml 1 tablespoon 2 teaspoons 2 tablespoons

600/ 4 cups 1 teaspoon 11/2 teaspoons 750g

750g

320ml

2 tablespoons 2 teaspoons

2 tablespoons

300g/ 2 cups

150g/ 1 cup

3 teaspoons

1 teaspoon

11/2 tablespoons

3 tablespoons

3 tablespoons

2 tablespoons

1 tablespoon

300ml 3 teaspoons 2 teaspoons 11/2 tablespoons

450g/ 3 cups 1 teaspoon 11/4 teaspoons

SETTING:

BASIC: Light, Medium or Dark

Multigrain Bread

INGREDIENTS:

Water Oil Salt Sugar White bread flour

Wholemeal plain flour Gluten flour

Bread improver Milk powder Sunflower seeds Kibble wheat Whole linsends Sesame seeds Cracked

buckwheat Tandaco yeast

1kg 370ml

3 tablespoons 2 teaspoons 3 tablespoons 375g/ 21/i cups

225/ 1 /s cups 1 tablespoon 1 teaspoon 2 tablespoons 3 tablespoons 3 tablespoons 2 tablespoons 1 tablespoon

1 tablespoon 11/2 teaspoons

1kg

1 tablespoon 11/4 teaspoons

SETTING: WHOLEWHEAT: Light, Medium or Dark.

Light Rye Bread

Water Oil Golden Syrup

INGREDIENTS:

Salt Bread flour Rye flour Gluten flour Bread improver Mik powder

Tandaco yeast

350ml 3 tablespoons 21/s tablespoons 1% teaspoons 375g/ 21/s cups 180g/ 11/2 cups 11/2 tablespoons 1 teaspoon 2 tablespoons 11/2 teaspoons

750g 290ml


2 tablespoons 11/2 tablespoons 11/4 teaspoons 300g/ 2 cups 120g/ 1 cup 1 tablespoon 1 Teaspoon 2 tablespoons 11/4 teaspoons

SETTING:

WHOLEWHEAT or RAPID: Light, Medium or Dark.

28

Flavoured

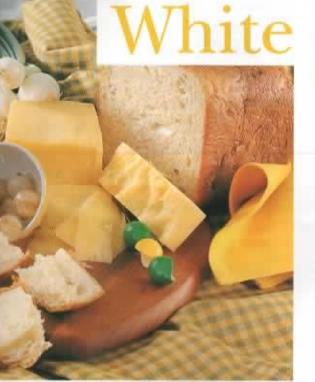

PROCEDURE

- 1. Place ingredients into bread pan in the exact order listed in the recipe.
- Wipe spills from outside of bread pan.
- 3. Lock the bread pan into position in the baking chamber and close the lid,
- 4. Press 'SELECT' to setting -1- 'Basic' -1kg -Medium.
- 5. Press 'LOAF' to 750g setting if required.
- 6. Press 'CRUST' to Dark or Light setting if required.
- 7. Press 'START'.

After baking, press 'STOP'. Remove bread from Bread Master Select and bread pan. Cool on rack.

Pumpkin & Pepita Bread

INGREDIENTS:

Water

OIL

Cooked pumpkin,

dried & mashed

Salt

Sugar

Bread flour

Milk powder

Bread improver

Gluten flour

Ground cummin

Ground nutmeg

Tandaco yeast

3 teaspoons 11/4 teaspoon

200ml

21/2 tablespoons

180g/ 1/4 cup

2 teaspoons

2 tablespoons

600g/ 4 cups

2 tablespoons

1 te spoon

1 teaspoon

1 easpoons

ADD AT THE BEEP:

Pepita nuts, chopped

70g/ 1/2 cup

SETTING:

BASIC or RAPID: Light, Medium or Dark

750g

170mi

2 tablespoons

140g/ 1/a cup

111/4 teaspoons

11/1 tablespoons

450g/3 cups

2 tablespoons

1 teaspoon

3 teaspoons

1 teaspoon.

1/1 teaspoon

11/4 teaspoons

50g/ 1/s cup

Sweet Corn & Capsicum Bread

INGREDIENTS: 1kg Water 260ml Oil 2 tablespoons Salt 2 teaspoons Sugar 3 tablespoons Canned creamed corn 5 tablespoons Bread flour 600g/ 4 cups Milk powder 2 tablespoons Gluten flour 2 teaspoons Bread improver 1 teaspoon Cajun seasoning √₂ teaspoon Tandaco yeast 13/4 teaspoons

750g
230ml
2 tablespoons
2 teaspoons
4 tablespoons
450g/ 3 cups
2 tablespoons
2 tablespoons
1 teaspoon

ADD AT THE BEEP:

Chopped red capsicum 6 tablespoons

4 tablespoons

The state of the s

11/2 teaspoons

SETTING:

BASIC or RAPID: Light, Medium or Dark.

Potato & Leek Bread

INGREDIENTS: Tkg Water 370ml Oil 3 tablespoons Salt 2 teaspoons Sugar 2 tablespoons Bread flour 600g/ 4 cups Milk powder 2 tablespoons Instant potato flakes 4 tablespoons Tandaco yeast 11/4 teaspoons 750g 310ml 2 tablespoons

2 tablespoons
11/4 teaspoons
11/4 tablespoons
450g/3 cups
11/4 tablespoons
3 tablespoons
11/4 teaspoons

ADD AT THE BEEP:

Chopped leek 50g/ 1/e cup

4 tablespoons

SETTING:

Sun-Dried Capsicum & Basil Bread

INGREDIENTS:	1kg	750g
Water	360ml	300ml
Oil from sun-dried capsicums Salt Bread flour Milk powder Gluten flour Bread improver Tandaco yeast	2 tablespoons 2 teaspoons 600g/ 4 cups 2 tablespoons 2 teaspoons 1 teaspoon	2 tablespoons 2 teaspoons 450g/ 3 cups 2 tablespoons 2 teaspoons 1 teaspoon

ADD AT THE BEEP:

Sun dried capsicum, well dried & chopped

well dried & chopped 4 tablespoons Fresh basil, chopped 4 tablespoons 3 tablespoons 3 tablespoons

SETTING:

BASIC or RAPID: Light, Medium or Dark.

Triple Mustard & Herb Bread

INGREDIENTS: Water Oil Salt Sugar Bread flour Bread improver Milk powder Wholegrain mustard Black mustard seeds Yellow mustard seeds Tandaco yeast	1kg 350ml 3 tablespoons 2 teaspoons 3 tablespoons 580g/ 31/4 cups 1 teaspoon 2 tablespoons 11/4 teaspoons 11/4 teaspoons 11/4 teaspoons	750g 300ml 2 tablespoons 1 1/4 teaspoon 2 tablespoons 450g/ 3 cups 1 teaspoon 2 tablespoons 1 teaspoon 1 teaspoon 1 teaspoon 1 teaspoon
--	---	---

ADD AT THE BEEP:

Fresh mixed herbs

of your choice, chopped 4 tablespoons

3 tablespoons

SETTING:

Garlic Chive Bread

INGREDIENTS: Water Oil Salt

Minced garlic

Bread flour

Milk powder

Sugar

1kg 370ml

3 tablespoons

2 teaspoons 2 teaspoons 600g/ 4 cups 2 tablespoons 2 tablespoons

111/4 teaspoons 11/2 teaspoons 450g/ 3 cups 1 / tablespoons 2 tablespoons

750a

310ml

Chopped fresh chives Tandaco yeast

3 tablespoons 11/2 teaspoons 2 tablespoons 11/4 teaspoons

2 tablespoons

SETTING:

BASIC or RAPID: Light, Medium or Dark.

Kalamata Bread

INGREDIENTS: Water

1kg 370ml

OIL Laska Curry Mix 3 tablespoons 11/i tablespoons

Salt Sugar Bread flour Milk powder Tandaco yeast 2 teaspoons 2 tablespoons 600g/ 4 cups 2 tablespoons 11/s teaspoons 1 tablespoon

750g 310ml

3 tablespoons 1 tablespoon 1º// teaspoons 11/2 tablespoons 450g/ 3 cups 11/2 tablespoons 11/4 teaspoons 3 teaspoons

ADD AT THE BEEP:

Chopped, pitted Kalamata olives

2 tablespoons

11/s tablespoons

SETTING:

Dried basil

BASIC or RAPID: Light, Medium or Dark.

Salami & Cheese Bread

INGREDIENTS: Water

Oil

Salt

Sugar

Bread flour

Milk powder

Onion powder

Tandaco yeast

1kg 370ml 3 tablespoons 2 teaspoons 2 tablespoons 600g/ 4 cups 2 tablespoons 1 teaspoon 1 teaspoon 11/2 teaspoons

750g 310ml

2 tablespoons 13/4 teaspoons 11/2 tablespoons 450g/ 3 cups 11/ tablespoons 1/4 teaspoon 1/4 teaspoon 1 // teaspoons

ADD AT THE BEEP:

Italian mixed herbs

Chooped mild salami Grated cheddar cheese

4 tablespoons 4 tablespoons

3 tablespoons 3 tablespoons

Grated Parmasen cheese

2 tablespoons

11/2 tablespoons

SETTING:

Sun-Dried Tomato & Pesto Bread

INGREDIENTS: 1kg 370ml Water 3 tablespoons OII 2 teaspoons Salt 2 tablespoons Sugar 600g/ 4 cups Bread flour 2 tablespoons Milk powder 3 teaspoons Dried mixed herbs

310ml 2 tablespoons 1³/₄ teaspoons 1¹/₂ tablespoons 450g/ 3 cups 1¹/₂ tablespoons 2¹/₂ teaspoons 1¹/₄ teaspoons

750g

ADD AT THE BEEP:

Tandaco yeast

Finely diced sun-dried tomatoes Prepared pesto

21/2 tablespoons 11/2 tablespoons

11/2 teaspoons

2 tablespoons 1 tablespoon

SETTING:

BASIC or RAPID: Light, Medium or Dark.

Onion Bread

750g INGREDIENTS: 1kg 310ml 370ml Water 2 tablespoons 3 tablespoons Oil 1º/4 teaspoons 2 teaspoons Salt 11/2 tablespoons 2 tablespoons Sugar 450g/3 cups 600g/ 4 cups Bread flour 11/2 tablespoons 2 tablespoons Milk powder 1 teaspoon 11/v teaspoons Onion powder 11/4 teaspoons 11/2 teaspoons Tandaco yeast

ADD AT THE BEEP:

Chopped Spanish onion

V= cup

4 tablespoons

SETTING:

BASIC: Light, Medium or dark.

Spicy Curry Bread

750g 1kg INGREDIENTS: 310ml 370ml Water 2 tablespoons 3 tablespoons Oil 11/4 teaspoons 2 teaspoons Salt 11/a tablespoons 3 tablespoons Sugar 450g/ 3 cups 600g/ 4 cups Bread flour 11/a tablespoons 2 tablespoons Coconut milk powder 2 tablespoons 2 tablespoons Tandoori powder 11/4 teaspoons 11/2 teaspoons Tandaco yeast

SETTING:

Sweeter Bread Bread

Most of the recipes in this section have the addition of nuts, chocolate, sultanas or other flavour enhancing ingredients. This occurs mostly at the sound of the beep. Therefore these recipes are not suitable to use with the Preset times.

PROCEDURE

- Place ingredients into bread pan in the exact order listed in the recipe.
- Wipe outside spills from outside of bread pan.
- Lock the bread pan into position in the baking chamber and close the lid.
- Press 'SELECT' to setting 3- 'Sweet' twg-Medium.
- 5. Press 1.OAF to 750g setting if required.
- Press 'CRUST' to Dark or Light setting if required.
- 7. Press START

After baking, press STOP. Remove bread from Bread Master Select and bread pan. Cool on rack.

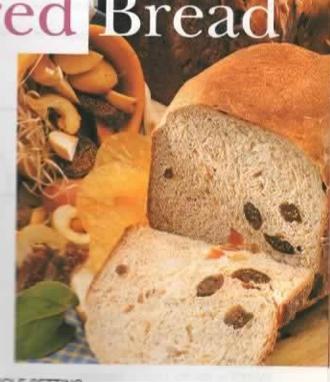


CHART SHOWING SEQUENCE FOR REGULAR CYCLE SETTING

LIGHT	Mead	2nd knead	1st rise	Punch	2nd rise	Punch down	3d /se	Baka	Total Time: 750g - 3.30hrs 1kg - 3.40 hrs
MEDIUM	Tot kneed	2nd knead	1st rise	Punch	2nd rise	Punchi down	3rd rise	Bake	Total Time: 750g - 3.40hrs 1kg - 3.50hrs
DARK	1st knead	2nd knead	1st rise	Punch down	2nd rise	Punch down	3rd rise	Bake	Total Time; 750g - 3.50hrs 1kg - 4.00hrs

ADD-IN BEEP: The Bread Master Select beeps 8 times, 5 minutes before the end of the second knead. Extra ingredients such as fruit, nuts etc. should be added at this point.

CHART SHOWING SEQUENCE FOR RAPID CYCLE SETTING

LIGHT	1st knead	1st rise	Punch down	2nd rise	3rd rise	Bake	Total Time: 750g - 3.00hrs 1kg - 3.10 hrs
MEDIUM	1st knead	1st rise	Punch down	2nd rise	3rd rise	Bake	Total Time: 750g - 3.10hrs 1kg - 3.20hrs
DARK	kneed	1st rise	Punch down	2nd rise	3rd rise	Bake	Total Time: 750g - 3.20hrs 1kg - 3.30hrs

To use the Rapid setting on specified recipes in this section both the salt and yeast quantities will need to be modified, as indicated below.

Salt	Decrease by 1/2 teaspoon
Yeast	Increase by 1/s teaspoon

These modifications are applicable to both loaf sizes ie. 750g and 1kg. The Rapid setting allows you to choose from Light, Medium or Dark crust colour.

Best results are achieved by using the longer settings, producing a loaf with optimum texture and NOTE: greater keeping qualities.

Fruit & Nut Bread

INGREDIENTS:	1kg	750g
1 egg and milk,		
to make up	250ml	200ml
Oil	1 tablespoon	1 tablespoon
Salt	11/2 teaspoons	11/4 teaspoons
Apple juice	120mls	100mis
Brown sugar	3 tablespoons	2 tablespoons
Bread flour	600g/ 4 cups	450g/ 3 cups
Grated lemon rind	3 teaspoons	2 teaspoons
Ground mixed spice	11/2 teaspoons	1 teaspoon
Tandaco yeast	2 teaspoons	11/4 teaspoons

ADD AT THE BEEP:

Dried fruit

(apricot medley) 150g/ 1 cup 115g/ 1/4 cup

SETTING:

SWEET or RAPID: Light or Medium.

Lemon Butter Bread

Water Lemon butter spread	1kg 370ml 3 tablespoons	750g 320ml 2 tablespoons
Salt	2 teaspoons	2 teaspoons
Bread flour	600g/ 4 cups	450g/ 3 cups
Milk powder	2 tablespoons	11/2 tablespoons
Tandaco yeast	11/2 teaspoons	11/4 teaspoons

ADD AT THE BEEP:

Grated lemon rind 3 teaspoons 2 teaspoons

SETTING:

Apricot & Macadamia Nut Bread

INGREDIENTS:

1kg 320ml

Water Apricot jam

Oil

3 tablespoons 3 tablespoons 11/ teaspoons

Salt Bread flour Milk powder

Tandaco yeast

600g/ 4 cups 2 tablespoons 2 teaspoons

750g 280ml

2 tablespoons 2 tablespoons 11/2 teaspoons 450g/ 3 cups

11/2 tablespoons 1 1/4 teaspoons

ADD AT THE BEEP:

Dried apricots, chopped Macadamia nuts,

3 tablespoons

2 tablespoons

roughly chopped

4 tablespoons

3 tablespoons

SETTING:

SWEET or RAPID: Light or Medium.

Apricot & Almond Delight Bread

INGREDIENTS: Water

Oil

Salt

Sugar

1kg

370ml

3 tablespoons 2 teaspoons 11/2 tablespoons

Bread flour Bread improver Milk powder Tandaco yeast

600g/ 4 cups

1 teaspoon 2 tablespoons 11/v teaspoons

750g 310ml

2 tablespoons 2 teaspoons 1 tablespoon

450g/ 3 cups 1 teaspoon 11/ tablespoons 11/4 teaspoons

ADD AT THE BEEP:

Apricot and Almond

Delights, chopped

220g/ 11/s cups

150g/ 1 cup

SETTING:

Water

SWEET or RAPID: Light or Medium.

Pecan & Maple Syrup Bread

INGREDIENTS:

1kg

Oil Salt 2 teaspoons Maple syrup

Sugar Bread flour Mik powder Tandaco yeast

310ml 3 tablespoons

4 tablespoons 2 tablespoons 600g/ 4 cups 2 tablespoons 750g 260ml

2 tablespoons 2 teaspoons 3 tablespoons Tivi tablespoons

450g/3 cups 11/4 tablespoons 11/4 teaspoons

ADD AT THE BEEP:

Pecans, chopped

4 tablespoons

11/ teaspoons

3 tablespoons

SETTING:

Toffee & Peanut Brittle Butter Bread

INGREDIENTS:

1kg 370ml 750g 310ml

Water Peanut butter

3 tablespoons

2 tablespoons

Sugar

2 teaspoons

11/v teaspoons 1 tablespoon

White bread flour Bread improver

11/2 tablespoons 600g/ 4 cups 1 teaspoon

450g/ 3 cups 1 teaspoon

Milk powder Dried yeast

2 tablespoons 11/s teaspoons

11/2 tablespoons 11/4 teaspoons

ADD AT THE BEEP:

Old style Toffee Peanut Brittle bar

60g

SETTING:

SWEET or RAPID: Light or Medium.

Coffee Bread

INGREDIENTS:

1kg

370ml

750g 320ml

Water Oil Honey

3 tablespoons 1 tablespoon

2 tablespoons 3 teaspoons

Coffee and chicory essence

3 teaspoons 2 teaspoons

2 teaspoons 2 teaspoons

Bread flour Milk powder 600g/ 4 cups 2 tablespoons 1 teaspoon

450g/ 3 cups 11/2 tablespoons 1/2 teaspoon

11/4 teaspoon

Nutmeg Tandaco yeast

11/2 teaspoons

SETTING:

SWEET or RAPID: Light or Medium.

Chocolate Tim Tam Bread

INGREDIENTS:

1kg 320ml 750a

Water Oil

3 tablespoons 11/ teaspoons

260ml 2 tablespoons 1 teaspoon

Brown sugar Bread flour

21/2 tablespoons 600g/ 4 cups

11/2 tablespoons 450g/ 3 cups

Milk powder Tandaco yeast 2 tablespoons 1º/a teaspoons

11/ tablespoons 1 / teaspoons

ADD AT THE BEEP:

Chocolate Tim Tams,

roughly chopped

150g/ 1 cup

90g/ 1/4 cup

SETTING:

Chocolate Liquorice Bread

INGREDIENTS:

1kg

Water

370ml

Oil Salt Sugar 3 tablespoon 3 teaspoons

White bread flour Bread improver 3 tablespoon 600g/ 4 cups 1 teaspoon

Milk powder Tandaco yeast 2 tablespoons 11/2 teaspoons 750g 310ml

2 tablespoons

2 teaspoons 2 tablespoons

450g/3 cups 1 teaspoon

11/2 tablespoons

11/4 teaspoons

ADD AT THE BEEP:


Chocolate liquorice

bullets, chopped

150g/ 1/4 cup

100g/ 1/2 cup

SETTING:

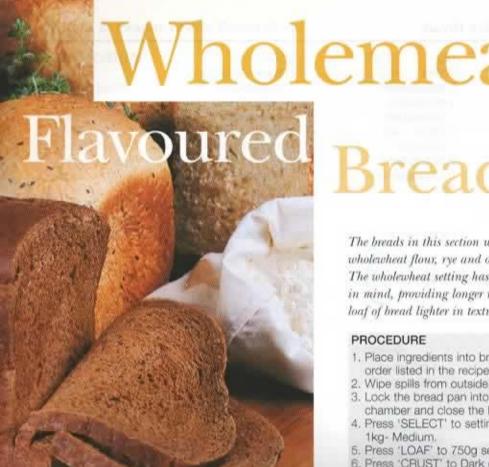

The breads in this section use ingredients such as wholewheat flour, rye and other grains or cereals. The wholewheat setting has been designed with this in mind, providing longer rising times to produce a loaf of bread lighter in texture and higher in volume.

PROCEDURE

- 1. Place ingredients into bread pan in the exact order listed in the recipe.
- Wipe spills from outside of bread pan.
- Lock the bread pan into position in the baking. chamber and close the lid.
- 4. Press 'SELECT' to setting 4 'Wholewheat' -1kg-Medium.
- Press 'LOAF' to 750g setting if required.
- 6. Press 'CRUST' to Dark or Light setting if required
- 7. Press START

After baking, press 'STOP'. Remove bread from Bread Master Select and bread pan, Cool on rack.

50/50 Wholemeal Bread

INGREDIENTS:

1kg 370ml

Water Oil

3 tablespoons

Salt

2 teaspoons

Sugar

3 tablespoons

Wholemeal plain flour Bread flour

300g/ 2 cups 300g/ 2 cups

Gluten flour Bread improver 2 tablespoons 1 teaspoon

Milk powder Tandaco yeast 21/2 tablespoons 11/2 teaspoons

SETTING:

WHOLEWHEAT: Light. Medium or Dark.

750g

300mi

2 tablespoons

1 / teaspoons

2 tablespoons

225g 11/1 cups

225g/ 11/s cups

1 / tablespoons

1 teaspoon

2 tablespoons

11/4 teaspoons

3 Grain Wholemeal Bread

INGREDIENTS: Water Oil Salt Brown sugar Wholemeal plain flour Bread flour Wheat bran Wheat germ Cracked wheat Gluten flour Bread improver Milk powder	1kg 370ml 3 tablespoons 2 teaspoons 3 tablespoons 375g/ 2½ cups 225g/ 1½ cups 3 tablespoons 3 tablespoons 1½ tablespoons 1 teaspoon 2 tablespoons	750g 310ml 2 tablespoons 1 1/2 teaspoons 2 tablespoons 300g/ 2 cups 150g/ 1 cup 2 tablespoons 2 tablespoons 1 tablespoon 1 1/2 tablespoons 1 teaspoon 1 tablespoons
Tandaco yeast	11/2 teaspoons	11/v teaspoons

SETTING:

WHOLEWHEAT: Light, Medium or Dark:

Bran Flake Bread

Gluten flour 21/2 tablespoons Bread improver 1 teaspoon Milk powder 2 tablespoons Tandaco yeast 11/2 teaspoons Bran Flake cereal 45g/ 1/2 cup	750g 320ml 2 tablespoons 1½ teaspoons 3 tablespoons 225g/ 1½ cups 225g/ 1½ cups 2 tablespoons 1 teaspoon 2 tablespoons 1½ teaspoons 1½ teaspoons 1½ teaspoons
---	---

SETTING:

WHOLEWHEAT or RAPID: Light, Medium or Dark.

Pumpernickel Bread

1kg INGREDIENTS: 370ml Water 2 tablespoons Olive oil 3 tablespoons Treacle 2 teaspoons Salt 1 tablespoon Instant coffee 300g/ 2 cups Rye flour Unprocessed bran 300g/ 2 cups Chocolate chips 3 tablespoons 1 tablespoon Fennel seeds 23/4 teaspoons Tandaco yeast

750g

300ml

11/2 tablespoons

2 tablespoons

11/2 teaspoons

250g/ 12/s cups

21/s tablespoons

3 teaspoons

150g/ 1 cup

3 teaspoons

21/2 teaspoons

30g/ 1/4 cup

SETTING:

WHOLEWHEAT or RAPID: Light, Medium or Dark.

Triticale Malt Bread

750g INGREDIENTS: 1kg 310ml 370ml Water 2 tablespoons 3 tablespoons Oil 2 teaspoons 2 teaspoons Salt 2 tablespoons 3 tablespoons Liquid malt Wholemeal plain 225g/ 11/e cups 300g/ 2 cups flour 225g/ 11/s cups 300g/ 2 cups Bread flour 2 tablespoons 21/1 tablespoons Gluten flour 1 teaspoon 1 teaspoon Bread improver 2 tablespoons 2 tablespoons Milk powder 11/2 teaspoons 11/4 teaspoons Tandaco yeast ADD AT THE BEEP:

40g/ 1/s cup:

SETTING:

Triticale flakes

WHOLEWHEAT: Light, Medium or Dark.

Honey Oats & Barley Bread

 INGREDIENTS:
 1kg

 Water
 370ml

 Oil
 3 table

Oil 3 tablespoons
Honey 3 tablespoons
Salt 2 teaspoons
Sugar 3 teaspoons
Wholemeal plain flour 375g/ 2½ cups
Bread flour 225g/ 1½ cups
Rolled oats 3 tablespoons

Rolled oats
Oat bran
Barley bran
Gluten flour
Bread improver
Milk powder
Tandaco yeast
A tablespoons

310ml 2 tablespoons 2½ tablespoons 1¼ teaspoons 2 teaspoons 300g/ 2 cups 150g/ 1 cup 3 tablespoons 1½ tablespoons 1½ tablespoons

750g

1 1/2 tablespoons 2 tablespoons 1 teaspoon 2 tablespoons 1 1/4 teaspoons

750g

310ml

2 tablespoons

2 tablespoons

11/ teaspoons

2 teaspoons

300g/ 2 cups

150g/ 1 cup

60g/ 1/2 cup

1 teaspoon

2 tablespoons

2 tablespoons

11/2 teaspoons

SETTING:

WHOLEWHEAT: Light, Medium or Dark.

Sunflower & Oatmeal Bread

INGREDIENTS: 1kg Water 370ml

Oil 3 tablespoons
Honey 21/2 tablespoons
Salt 2 teaspoons
Sugar 3 teaspoons
Wholemeal plain flour 375g/ 21/2 cups
Bread flour 225g/ 11/2 cups
Oatmeel 80g/ 1/2 cup
Gluten flour 21/2 tablespoons
Record Improvers

Bread improver 1 teaspoon
Milk powder 2 tablespoons
Tandaco yeast 2 teaspoons

ADD AT THE BEEP: Sunflower seeds 80g/ 1/2 cup

SETTING: WHOLEWHEAT or RAPID: Light, Medium or Dark. 50g/ 1/s cup

SWIGHT SWARD PROGRAMMED TO SWARD

Russian Blackbread

INGREDIENTS:

750g

Water

310ml

Salt

2 teaspoons

Treacle Instant coffee 1 / tablespoons

Wholemeal plain flour

3 teaspoons 150g/1 cups

Rye flour Bread flour 80g/ 1/2 cups

Butter

200g/ 11/s cup 21/s tablespoons

Fennel seeds Tandaco yeast 1/4 teaspoon 1/4 teaspoon

SETTING:

WHOLEWHEAT or RAPID: Light, Medium or Dark.

NOTE!

.

There is no recipe for the 1kg loaf as testing indicated unsatisfactory results for this loaf size.

Yeast Free

CHART SHOWING SEQUENCE FOR YEAST FREE

Yeast 1st 2nd Bake Total Free knead knead Time; 2.00hrs

All recipes use local Australian ingredients and Australian Standard Metric measuring tools (cup, spoons and weighing scales) for accuracy. There will be a weight variance in each baked loaf in this section.




The preset timer cannot be used for recipes in this section. The resing agents used in place of yeast in these recipes could be prematurely activated and prevent the loaf from rising.



All ingredients must be at room temperature. Add ingredients in the order listed in the recipe.

Yeast Free Bread is a simple bread and is made using baking powder as the main raising agent (it does not have the same strength as yeast). The following recipes will give Damper or Muffin-Style Breads which will be heavy in texture and not as highly risen as yeasted breads.

To ensure a well baked loaf is achieved, check the dough in the first five minutes of kneading. If the dough is too slack and running down onto the base of the pan, add small amounts of flour or bread mix to ensure the dough forms into a soft, plable dough. If the dough is too slack it may gue the baked loaf the appearance of being overcooked laminated on the base and having a heavy, doughy top. If the dough is too dry just add 1-2 teaspoons of extra water.

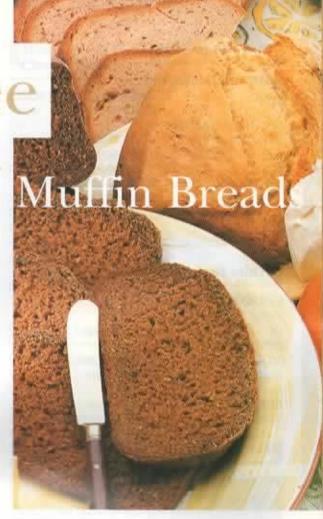

Plain Yeast Free Bread

PROCEDURE

- Add liquid ingredients to bread pan.
- Sift dry ingredients and add to bread pan. Lock bread pan into baking chamber.
- Press 'SELECT' to setting 5 'Yeast Free Bread'.
- 4. Press 'START'
- With machine still running, use a plastic spatula to scape mixture from the sides, corners and base of bread pan.
- After ingredients have mixed together well, close the lid and leave Bread Master Select to complete cycle.

After baking is complete, press 'STOP'. Remove bread from Bread Master Select and bread pan. Cool on rack.

Plain White Damper

LIQUID INGREDIENTS:

Water 390ml

Oil 2 tablespoons

DRY INGREDIENTS:

White bread flour 600g/ 4 cups
Sugar 1 tablespoon
Salt 1 teaspoon
Milk powder 2 tablespoons
Baking powder 6 teaspoons

SETTING:

YEAST FREE: "5"

White Bread Mix Damper

LIQUID INGREDIENTS:

Water 350ml

Oil 1 tablespoon

DRY INGREDIENTS:

White bread mix 600g/ 4 cups Baking powder 6 teaspoons

SETTING:

YEAST FREE: "5"

Flavoured Yeast Free Breads

PROCEDURE

- Add liquid ingredients to bread pan.
- Sift dry ingredients and add to bread pan. Lock bread pan into baking chamber.
- 3. Press 'SELECT' to setting 5 'Yeast Free'.
- 4. Press 'START'
- With machine still running, add Additions. Use a plastic spatula to scrape mixture from the sides, corners and base of bread pan.
- After ingredients have mixed together well, close the lid and leave Bread Master Select to complete cycle.

After baking is complete, press 'STOP'. Remove bread from Bread Master Select and bread pan. Cool on rack.

Polenta & Capsicum Bread

LIQUID INGREDIENTS:

Olive oil 125ml Eggs 3 x 60g Milk 250ml

DRY INGREDIENTS:

Self-raising flour 375g/ 21/2 cups
Sugar 2 tablespoons
Polenta 170g/ 1 cup
Bicarbonate of soda 1 teaspoon

Capsicum, finely

chopped 55g/ 1/2 cup

SETTING:

YEAST FREE: "5"

Cheese Buttermilk Bread

LIQUID INGREDIENTS:

Butter, melted 40g/ 2 tablespoons

Eggs 3 x 60g Buttermilk 460ml

DRY INGREDIENTS:

Bread flour
Salt
Grain mustard
Grated tasty cheese
Bicarbonate of soda
Baking powder

600g/ 4 cups
1½ teaspoons
55g/ ½ cup
1 teaspoon
3 teaspoons

SETTING:

YEAST FREE: "5"

Lemon & Raisin Bread

LIQUID INGREDIENTS:

 Olive oil
 3 tablespoons

 Eggs
 3 x 60g

 Buttermilk
 400ml

DRY INGREDIENTS:

Bread flour 525g/ 3½ cups
Sugar 250g/1 cup
Grated lemon rind 1 tablespoon
Bicarbonate of soda 2½ tablespoons

ADD AT THE BEEP:

Finely chopped raisins 90g/ 1/2 cup

SETTING:

YEAST FREE: "5"

Eggless Caraway & Date Bread

LIQUID INGREDIENTS:

3 tablespoons Butter, melted 360ml Milk

DRY INGREDIENTS:

525g/ 31/s cups Self-raising flour 185g/ 1/4 cup Sugar 11/2 teaspoons Salt Carraway seeds 2 teaspoons Bicarbonate of soda 1/2 teaspoon

ADD AT THE BEEP:

Finely chopped dates 80g/ 1/2 cup

SETTING:

YEAST FREE:

Orange & Poppyseed Bread

LIQUID INGREDIENTS:

Milk 320ml

3 tablespoons Orange juice Butter, melted 3 tablespoons 2 x 60a Eggs

DRY INGREDIENTS:

485g/ 31/4 cups Self-raising flour 250g/1 cup Sugar Grated orange rind 21/1 tablespoons Bicarbonate of soda 11/a teaspoons Poppyseeds 3 tablespoons

SETTING:

YEAST FREE: "5"

Banana & Pecan Muffin Bread

LIQUID INGREDIENTS:

Butter, melted 3 tablespoons 2 x 60g Eggs Milk 80ml Mashed banana 380g/ 1cup

DRY INGREDIENTS:

340g/ 21/4 cups Bread flour 250g/ 1 cup Brown sugar 1/2 teaspoon Salt Baking powder 2 teaspoons Bicarbonate of soda 1/2 teaspoon

ADD AT THE BEEP:

Pecan nuts 70g/ 1/2 cup

SETTING:

YEAST FREE:

Mixed Fresh Herb & Parmesan Cheese Bread

LIQUID INGREDIENTS:

Water 270ml Oil

1 tablespoon

DRY INGREDIENTS:

White bread flour 500g/31/s cups Bread improver 1 teaspoon 1 tablespoon Sugar Salt 1 teaspoon Baking powder 6 teaspoons

Grated Parmesan

2 tablespoons cheese

Chopped fresh herbs 1/a cup

SETTING:

"5" YEAST FREE:

Tangy Orange Marmalade Bread

LIQUID INGREDIENTS:

270ml Water

1 tablespoon

Orange marmalade 1/4 CUD

DRY INGREDIENTS:

White bread flour 500g/ 31/a cups Bread improver 1 teaspoon Salt 1 teaspoon Baking powder 6 teaspoons Grated orange rind 2 teaspoons

SETTING:

"5" YEAST FREE:

Strawberry & Sour Cream Bread

LIQUID INGREDIENTS:

Water 125ml 125ml/ V= cup Light Sour Cream Strawberry topping 2 tablespoons Chopped strawberries 1/2 cup

DRY INGREDIENTS:

500g/ 31/s cups White bread flour 1 teaspoon Bread Improver 1 teaspoon Salt Baking powder 6 teaspoons

SETTING:

"5" YEAST FREE:

Sweet & Sour Bread

LIQUID INGREDIENTS:

Buttermilk 500ml

Honey 3 tablespoons
Molasses 2 tablespoons
Golden syrup 1 tablespoon

DRY INGREDIENTS:

Wholemeal plain flour 225g/ 1½ cups
White bread flour 150g/ 1 cup
Bread improver 1 teaspoon
Unprocessed bran 25g/ ½ cup
Salt 1 teaspoon
Carraway seeds 2 teaspoons
Bicarbonate of soda 2 teaspoons

SETTING:

YEAST FREE: "5"

Banana Mascarpone Bread

LIQUID INGREDIENTS:

Butter, melted 3 tablespoons
Eggs 2 x 60g
Mascarpone cheese 100g/ 1/2 cup
Banana, ripe, mashed 265g/ 1 cup

DRY INGREDIENTS:

White bread flour 150g/ 1 cup
Self-raising flour 185g/ 11/4 cups
Bread improver 1 teaspoon
Brown sugar 175g/ 1 cup
Mixed spice 3 teaspoons
Baking powder 1 teaspoon
Bicarbonate of soda 1/4 teaspoon

SETTING:

YEAST FREE: "5"

47

Vennet Errore

Gluten Free

All recipes use local ingredients and Australian Standard Metric measuring tools (cup, spoons and weighing scales) for accuracy. The weight of the baked bread in this section will be more than that of the Wheat Bread, due to the ingredient properties used in each recipe.

Your Breville Bread Master Select has been developed to make Gluten Free Bread with ease. The following recipes have been developed without using any grains or ingredients that contain gluten. Therefore, these recipes are suitable for people with specific food allergies or intolerances.



Making gluten free bread is different from traditional baking, therefore it is important to carefully read the following information.

For information on the availability of gluten free ingredients (such as Guar or Xanthan gum) contact the Coeliac Society in your state.

Follow the directions for each recipe carefully. As the preparation is different from automatic bread making the preset timer cannot be used when making these recipes.

Always use the ingredients specified in recipes for successful gluten free baking.


Check with the yeast manufacturer to ensure that the yeast is gluten free. Only use active dry yeast when making these recipes.

Ensure that the vinegar used is gluten free. Vinegar helps to strengthen the dough to rise

Ensure that the flour is gluten free, Buy it from a reliable source to ensure freshness.

The use of prepackaged gluten free bread mixes is not recommended.

Xanthan Gum is a fine creamy white powder, and acts as a substitute for gluten and gives

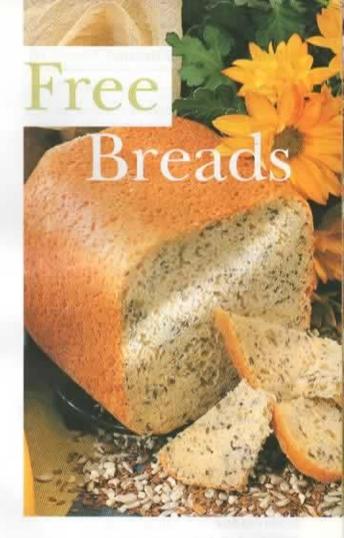

structure to the bread so that the dough will rise. Xanthan Gum is food additive number 415.

Guar Gum is a powdery substance with a similar function to Xanthan Gum, It is high in fibre and can sometimes have a laxative effect on people with sensitive digestive systems. Guar gum is food additive 412.

Lactose Intolerance: Milk powder may be substituted with a soy milk powder but may result in a heavier loaf. Coconut powder can also be used as a substitute and will give a pleasant flavour.



All ingredients must be at room temperature. These recipes are not suitable to use with the preset timer.

Plain Gluten Free Breads

PROCEDURE

- Mix liquid ingredients together in a bowl. (Do not use electric mixer as this will aerate the mixture.)
- Mix dry ingredients together in a large bowl.
 Using a pliable spatula, combine liquid and dry
 ingredients. Mix to a soft dough ensuring all
 ingredients are well combined.
- Spoon dough into bread pan, pressing down with a spatula after each spoonful, to eliminate air bubbles. Lock bread pan into baking chamber.
- Press 'SELECT' to setting 1 'Basic' 1kg -Medium'
- 5. Press 'LOAF' to 750g setting if required.
- Press 'CRUST' to Dark or Light setting if required.
- 7. Press 'START'.

After baking, press 'STOP'. Remove bread from Bread Master Select and bread pan. Cool on rack.

Brown and White Rice Bread

LIQUID INGREDIENTS:

Water 450ml

 Oil
 3 tablespoons

 Eggs
 3 x 60g

 Vinegar
 1 teaspoon

DRY INGREDIENTS:

White rice flour 405g/ 21/c cups Brown rice flour 180g/ 1 cup Xantham or Guar gum 1 tablespoon Sugar 3 tablespoons Salt 11/2 teaspoons Milk powder 3 tablespoons Tandaco yeast 2 teaspoons

SETTING:

BASIC: Light, Medium or Dark

Mock Light Rye

LIQUID INGREDIENTS:

 Water
 350ml

 Oil
 4 tablespoons

 Golden syrup
 2 tablespoons

 Fggs
 3 x 60g

Eggs 3 x 60g Vinegar 1 teaspoon

DRY INGREDIENTS:

White rice flour
Brown rice flour
Xantham or Guar gum
Dark brown sugar
Salt
Milk powder
Carraway seeds
Tandaco yeast

405g/ 2½ cup
180g/ 1 cup
1 tablespoon
1 tablespoons
1 tablespoons
2 tablespoons
2 teaspoons

SETTING:

BASIC : Light, Medium or Dark.

Flavoured Gluten Free Breads

PROCEDURE

- Mix liquid ingredients together in a bowl. (Do not use electric mixer as this will aerate the mixture).
- Mix dry ingredients together in a large bowl.
 Using a pliable spatula, combine liquid and dry
 ingredients. Mix to a soft dough ensuring all
 ingredients are well combined, Fold in Additions.
- Spoon dough into bread pan, pressing down with a spatula after each spoonful, to eliminate air bubbles. Lock bread pan into baking chamber.
- Press 'SELECT' to setting 1 'Basic' 1kg-Medium.
- Press 'CRUST' to Dark or Light setting if required.
- 6. Press 'START'.

After baking, press 'STOP'. Remove bread from Bread Master Select and bread pan. Cool on rack.

Spicy Sultana Bread

LIQUID INGREDIENTS:

Water 350ml

Oil 3 tablespoons Eggs 3 x 60g Vinegar 1 teaspoon

DRY INGREDIENTS:

White rice flour 360g/ 2 cups
Brown rice flour 180g/ 1 cup
Xantham or Guar gum 1 tablespoon
Sugar 3 tablespoons
Salt 11/4 teaspoons
Milk powder 60g/ 1/2 cup
Ground cinnamon 11/6 teaspoons
Tandaco yeast 2 teaspoons

ADD AT THE BEEP:

Sultanas 130g/ 1/4 cup

SETTING:

BASIC : Light, Medium or Dark.

Cheesy Cheddar Bread

LIQUID INGREDIENTS:

 Water
 400ml

 Oil
 3 tablespoons

 Eggs
 3 x 60g

 Vinegar
 1 teaspoon

DRY INGREDIENTS:

White rice flour 360g/ 2 cups
Brown rice flour 180g/ 1 cup
Xantham or Guar gum 1 tablespoon
Sugar 3 tablespoons
Salt 11/2 teaspoons
Milk powder 3 tablespoons
Tandaco yeast 2 teaspoons

ADD AT THE BEEP:

Grated cheddar

cheese 195g/ 1/a cup

SETTING:

BASIC : Light, Medium or Dark.



The weight of the shaped and baked NOTE: dough will vary depending on recipe style.

When the dough cycle is complete, remove the dough and place on a lightly floured surface. Knead for 1 minute by hand to a well rounded form. Shape the dough following the recipe instructions.

PROCEDURE

- 1. Place ingredients into the bread pan, in the exact order listed in the recipe.
- 2. Wipe spills from outside of bread pan.
- 3. Lock the bread pan into position in the baking chamber and close the lid.
- 4 Press 'SELECT' to setting 7 'Dough'.
- 5. Press 'START'

At the and of the program, press 'STOP'. Remove bread pan from the baking chamber and remove dough from the bread pan. Dough is now ready for hand shaping, rising and baking.

Dough

CHART SHOWING SEQUENCE FOR DOUGH

DOUGH 1st

Total Time: 1.30 hrs

Make a Master Dough

White Bread Dough

INGREDIENTS:

Water 310ml Egg 1x60g

Oil 2 tablespoons Salt 1 teaspoon Sugar 2 tablespoons Bread flour 600g/ 4 cups Tandaco yeast 2 teaspoons

SETTING:

DOUGH:

Sweet Dough

INGREDIENTS:

Water 285ml Eggs 2 x 60g

Butter, softened,

chopped 60g/ 3 tablespoons Salt 1 teaspoon

Sugar 21/2 tablespoons Bread flour 600g/ 4 cups Tandaco yeast 3 teaspoons

SETTING:

DOUGH:

Wholemeal Dough

INGREDIENTS:

Water 310ml

Oil 2 tablespoons
Salt 1 teaspoon
Sugar 3 tablespoons
Wholemeal plain flour
Tandaco yeast 2 teaspoons

SETTING:

DOUGH: "7

Shaping Ideas for Master Doughs

Bread Rolls

- Take a quantity of one of the Master Dough recipes.
- Divide dough into 16 equal pieces. Place onto a lightly floured surface. Knead each piece and shape into a round.
- Place rolls together on a lightly greased baking tray.
- Cover rolls with lightly greased plastic food wrap and stand in a warm area for 30 minutes or until doubled in size.
- 5. Remove wrap, brush tops of rolls with milk.
- Bake in a preheated oven at 200°C for 12-15 minutes or until cooked and golden brown.

Sticky Cinnamon Rolls

- Take a quantity of Sweet Dough and place onto a lightly floured surface.
- Roll dough out to a 40cm x 38cm square.
 Melt 3 tablespoons of butter. Brush half over dough. Combine 4 tablespoons brown sugar, 70g/ ½ cup finely chopped pecan nuts with 1½ tablespoons ground cinnamon and sprinkle over rolled out dough.
- Drizzle remaining melted butter over sugar mixture. Roll up widthwise and cut into 2cm thick slices.
- Place on a greased baking tray, 5cm apart. Cover with lightly greased plastic food wrap and stand in a warm area for 20 minutes or until doubled in size.
- Bake in a preheated oven at 180°C for 25-30 minutes or until golden brown. Brush with GELATINE GLAZE (recipe on page 62) whilst still hot, then drizzle with VANILLA GLAZE (recipe on page 62)

Wholewheat Honey Rolls

- Replace the sugar in the Wholemeal Dough with 3 tablespoons honey.
- Divide completed dough into 12 equal pieces and place onto a lightly floured surface. Knead each piece and shape into rounds.
- Place rolls close together on a lightly greased baking tray.
- Cover rolls with lightly greased plastic food wrap and stand in a warm area for 50-60 minutes or until doubled in size.
- 5. Remove wrap, brush tops of rolls with milk.
- Bake in a preheated oven at 200°C for 12-15 minutes or until cooked and golden brown.
 Brush with GELATINE GLAZE (recipe on page 62) while still hot, if desired.

Doughnuts

- Take a quantity of Sweet Dough.
- Turn out onto a lightly floured surface, roll out to 1 cm thickness. Cut into 5.5 cm rounds, using a pastry cutter.
- Place a teaspoon of strawberry jam on half the rounds, top with remaining rounds. Press edges together with fingers and place onto greased trays. Cover with plastic food wrap and stand in a warm area until doubled in size.
- Cook doughnuts in hot oil, a few at a time until golden brown and cooked through. Drain on absorbent paper. Combine V_i cup sugar with 1 tablespoon of ground cinnamon. Toss hot doughnuts in sugar mixture. Serve while still warm.

Apple Twist

- 1. Take a quantity of Sweet Dough.
- Turn out onto a lightly floured surface and roll dough out into a 30cm x 50cm rectangle. Cut into 4 strips lengthwise.
- Combine 300g can of pie apples, 4
 tablespoons mixed dried fruit with 4
 tablespoons of desiccated coconut, then
 spoon down the centre of each strip. Fold in
 half lengthwise and seal edges by pressing
 together. Roll into a sausage shape.
- Twist 2 strips together and place on a greased baking tray. Repeat with remaining rolls.
- Cover lightly with greased plastic food wrap and stand in a warm area for 20 minutes or until doubled in size.
- Bake in a preheated oven at 180°C for 20-25 minutes or until golden brown.
- Slide twists onto a cake cooler. Brush with GELATINE GLAZE (recipe on page 62) whilst still hot. Stand for 5-10 minutes before serving.

Hot Cross Buns

- Include 1 tablespoon of ground cinnamon and 1 tablespoon ground mixed spice with dry ingredients when making Sweet Dough recipe.
- At the beep add 155g/ 1/s cups sultanas and 45g/ /s cup mixed peel.
- Divide dough into 18 pieces and turn out onto a lightly floured surface. Shape into rounds. Place close together on a greased baking tray.
- Cover with lightly greased plastic food wrap and leave to stand in a warm area for 20 minutes or until doubled in size.
- Blend together 2 tablespoons of water and 40g/ 1/4 cup plain flour until a smooth batter is formed. Spoon into a piping bag fitted with a small piping nozzle. Remove wrap from rolls and pipe a cross onto each bun.
- Bake in a preheated oven 190°C for 12-15 minutes or until golden brown.
- Slide buns from baking tray onto a cake cooler. If desired, brush HOT CROSS BUN GLAZE (recipe on page 62) over hot buns. Stand 5-10 minutes before serving.

Ham And Pickle Scrolls

- Roll out half a quantity of Wholemeal Dough to a rectangle approximately 25cm x 40cm on a lightly floured surface. Measure half way across the width, lightly score with the point of a knife, down the entire length of the dough.
- Spread 3 tablespoons of Mustard Pickles down one side of the score mark. Top with 3 slices of sandwich ham, cutting and overlapping to fit this area.
- Roll up the dough lengthwise, like a Swiss
 Roll, to encase the filling. Turn dough over and
 repeat with the same quantities of pickles and
 ham on the opposite half. Then roll dough in
 the same manner to reach opposite roll.
- Trim the ends, then cut into 2.5cm slices. Place slices, cut side upwards, onto a lightly greased baking tray.
- Cover with plastic food wrap and allow to stand in a warm area until doubled in size. Brush with milk.
- Bake at 190°C for 20-25 minutes or until cooked and golden brown.



Pizza

Pizza Doughs

The Pizza Dough setting is suitable for all your favourite Pizza and Focaccia recipes.

PROCEDURE

- Place ingredients into the bread pan, in the exact order listed in the recipe.
- 2. Wipe spills from outside of bread pan.
- Lock the bread pan into position in the baking chamber and close the lid.
- 4 Press 'SELECT' setting to 8 'Pizza Dough'.
- 5. Press 'START'.

For a softer more pliable texture remove dough from pan 30 minutes before completion of PIZZA DOUGH setting. Press 'STOP'. Dough is now ready for handshaping and baking.

CHART SHOWING SEQUENCE FOR PIZZA DOUGH

PIZZA 1st 1st Total Time: DOUGH knead rise 1,00 hr

Pizza Dough

INGREDIENTS:


Water 200ml
Olive oil 1 tablespoon
Salt 1 teaspoon
Bread flour 375g/ 2½ cups
Tandaco yeast 1¾ teaspoons

SETTING:

DOUGH: "8

SUGGESTED TOPPINGS

Tomato paste, mushrooms, capsicums, onions, tomatoes, capers, pineapple pieces, olives, herbs, salami, ham, anchovies, sardines, cheese se grated mozzarella, Parmesan).

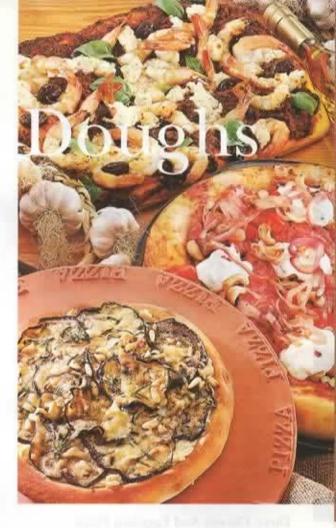

HANDSHAPING

- Roll dough on a lightly floured surface into a 25cm round for a thick based pizza or into 2 x 20cm rounds for a thinner based pizza.
- Place onto a lightly greased baking tray. Spread or sprinkle pizza with selected pizza toppings.
- Bake in a preheated oven at 200°C for 12-15 minutes or until base is cooked and topping heated through.

Tandoori Pizza

- Mix together 3 tablespoons Sharwoods Tandoori Paste with 4 tablespoons natural yoghurt.
- Pour tandoori mixture over 400g chicken tenderloins, toss well to coat chicken. Set aside to marinate for an hour or two.
- Melt a tablespoon of butter in a frypan, saute a sliced Spanish onion for 2-3 minutes.
- Roll out a quantity of Pizza Dough on a lightly floured surface to a 30cm round for one large pizza. Place onto a lightly greased pizza tray.
- Spread the pizza base with 3 tablespoons bottled Hot Tomato Chutney. Top with the Tandoori-coated chicken and sauteed onions.
- Sprinkle with 3 tablespoons Stir Fry Nut Mix (cashews and almonds).
- Bake at 200°C for 20-25 minutes or until chicken is cooked and pizza base is golden brown.
- Mix a finely chopped tomato, a finely chopped red chilli, a tablespoon of white vinegar and a teaspoon of sugar. Sprinkle tomato mixture on top of cooked pizza.
- Serve with a cucumber dressing, made by combining half a finely chopped Lebanese cucumber, 1/2 cup natural yoghurt, two tablespoons chopped fresh mint, 2 tablespoons chopped coriander leaves and 1 teaspoon sugar.

Three Cheese And Eggplant Pizza

- Take a large eggplant, cut into 5mm slices, then sprinkle each slice with a little salt, stand for 30 minutes, rinse and pat dry on paper towel.
- Brush the base of a non-stick frypan with a little olive oil. Cook eggplant slices, a few at a time, until lightly golden on both sides.
- Roll out a quantity of Pizza Dough on a lightly floured surface to a 30cm round for one large pizza. Place on a lightly greased pizza tray.
- Combine 400g ricotta cheese with 125g crumbled blue cheese. Spread over prepared pizza base.
- Arrange the eggplant slices decoratively on top of the pizza base.
- Sprinkle with a teaspoon of finely chopped fresh sage, 3 tablespoons pine nuts, 3 tablespoons freshly grated Parmesan cheese and some finely ground black pepper.
- Bake at 200°C for 20-25 minutes or until pizza base is cooked and golden brown.

Pesto Prawn And Ricotta Pizza

- Roll out a quantity of Pizza Dough on a lightly floured surface to a 30cm round for one large pizza. Place onto a lightly greased pizza tray.
- Spread the pizza base with 3 tablespoons tomato paste, then spoon on 1/2 cup bottled sun-dried tomato pesto.
- Scatter 250g peeled, green prawns over pesto.
- Arrange ½ cup Calmatti olives between the prawns.
- Dollop 4-5 heaped tablespoons ricotta cheese on top.
- 6. Brush prawns with a little olive oil.
- Bake at 200°C for 20-25 minutes or until pizza base is golden and prawns are pink and cooked.
- Decorate with a few fresh basil leaves before serving.

Cheese Stuffed Pizza Crust

- Halve a quantity of Pizza Dough and roll out each portion onto a lightly floured surface to a 30cm round.
- Line one portion into a lightly greased pizza pan.
- Sprinkle 85g/ % cup grated mozzarella cheese over pizza base to within 2.5cm of the edge.
- Brush the edges of the cheese-topped pizza base lightly with water.
- Top with second portion of rolled pizza base. Press edges together firmly to conceal cheese.
- Finish with your favourite topping and bake.

Focaccia

INGREDIENTS:

Water 250ml

Olive oil 2 tablespoons
Salt 1 teaspoon
Sugar 2 teaspoons
Bread flour 450g/ 3 cups
Tandaco yeast 2 teaspoons

SETTING:

DOUGH: "8"

TOPPING

Olive oil 3 tablespoons Rock salt 3 tablespoons Black olives, sliced 4 tablespoons

HANDSHAPING

For a thick Focaccia

- Press dough into a lightly greased 19cm x 29cm lamington tin.
- Cover with lightly greased plastic food wrap and stand in a warm area for 30 minutes or until doubled in size.
- Remove wrap, brush dough with olive oil and sprinkle with rock salt and olives.
- Bake in a preheated oven 200°C for 25-30 minutes or until golden brown.

For a thinner Focaccia


 Roll dough on a lightly greased baking tray until 2cm thick. Prepare as for a thick Focaccia.

Marinated Roasted Tomato And Ricotta Focaccia

- Halve a quantity of Focaccia Dough. Roll out each portion onto a lightly floured surface to a thin round, about 30cm in diameter.
- Transfer one round to a greased baking tray and spread evenly with 250g ricotta cheese.
 Top with 5 drained and dried marinated roasted tomato halves, then sprinkle with 1 tablespoon chopped fresh basil. Brush edges with a little beaten egg.
- Top with the second dough and seal edges together. Dimple the top surface with finger tips. Brush with a little olive oil.
- Cover with plastic food wrap and allow to stand in a warm draught-free place until doubled in size.
- 5 Brush the surface with 2 tablespoons olive oil and sprinkle with 1 tablespoon rock salt.
- Bake at 200°C for 20-25 minutes or until cooked and golden brown.

Cheese And Olive Schiacciata (small individual focaccia)

- Divide a quantity of Focaccia Dough into three portions. Shape each portion into a ball. Roll out each ball onto a lightly floured surface to a round 5mm in thickness.
- Transfer to lightly greased baking trays. Brush each round with a little oil.
- Cover with plastic food wrap and allow to stand in a warm draught-free place until doubled in size.
- Top each round with 55g/ /₁ cup grated cheddar cheese, 1 tablespoon grated fresh Parmesan cheese and 2 tablespoons sliced black olives, Drizzle with a little olive oil.
- Bake at 200°C for 20-25 minutes or until cooked and golden brown.

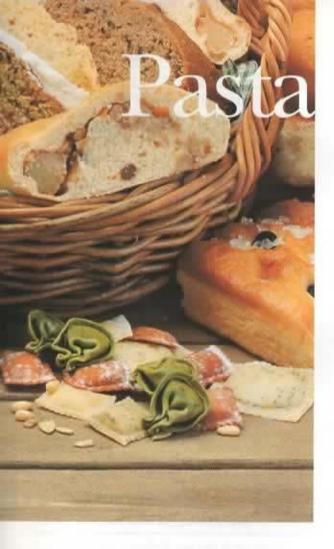

PROCEDURE

- Place ingredients into bread pan, in the exact order listed in the recipe.
- Wipe spills from outside of bread pan.
- 3. Lock the bread pan into position in the baking chamber and close the lid.
- 4. Press the 'SELECT' to setting 9 'Pasta'.
- 5. Press 'START'.

At the end of the program, press 'STOP'. Remove bread pan from the baking chamber and remove Pasta dough. Dough is now ready for hand shaping or placing through a Pasta Extruder.



If the pasta dough appears too sticky or soft, knead dough with additional flour until dough is smooth to touch.

CHART SHOWING SEQUENCE FOR PASTA DOUGH

Total Time:

Dough

Pasta Dough

INGREDIENTS:

Water

220ml

Olive oil Salt Plain flour Semolina

1 tablespoon 11/2 tablespoons 300g/ 2 cups

170g/ 1 cup

SETTING

PASTA:

Egg Pasta Dough

INGREDIENTS:

Eggs, lightly beaten 4 x 60g Olive oil 1 tablespoon

Salt Plain flour

1 teaspoon 300g/ 2 cups

Semolina 170g/ 1 cup

SETTING

PASTA:

Tomato Pasta

INGREDIENTS:

Water

100ml

Tomato paste

2 tablespoons

Eggs, lightly beaten 3 x 60g Olive oil

1 tablespoon

Salt

1 teaspoon

Plain flour Semolina

300g/ 2 cups 170g/ 1 cup

SETTING

PASTA:

Lamb & Coriander Ravioli

INGREDIENTS:

Pasta dough

1 Qty

LAMB FILLING: Lean lamb mince

315a

Minced garlic

1 teaspoon

Grated fresh

Parmesan cheese

1 tablespoon

Fresh coriander.

finely chopped Ground nutmea

1 teaspoon

Freshly ground

1/4 teaspoon

black pepper

1/4 teaspoon

HANDSHAPING

1. Divide dough into two equal portions. Roll out each portion on a lightly floured surface to a square approximately 30cm x 30cm,

2. Place filling ingredients in a glass bowl, mix well to combine.

3. Place teaspoons of filling 5cm apart over one of the pasta squares. Brush edges and between filling lightly with water and top with remaining pasta square. Press firmly between fillings and along edges and cut into squares using a pastry wheel. Sprinkle ravioli with a little flour.

 Cook raviol in boiling water in a large saucepan for 5 minutes, or until just tender. Drain well.

500g

Gnocchi

INGREDIENTS:

Potatoes, boiled,

well drained and mashed

Butter 1 tablespoon 200g/ 11/s cups Plain flour

Eggs, lightly beaten 2 x 60g 1 teaspoon

Freshly ground

black pepper 1 teaspoon

SETTING:

PASTA:

HANDSHAPING:

 Place the dough onto a lightly floured surface, knead lightly then divide into six portions.

2. Roll each portion into a long sausage shape. Cut into 1.5-2cm pieces and press each piece with the outside of a fork to give the traditional gnocchi pattern.

3. Bring a large pan of water to the boil, add the gnocchi, cook for about 3 minutes, or until pieces rise to the surface. Using a slotted spoon, drain the gnocchi and transfer to serving bowls. Serve, tossed with your favourite sauce.

Pumpkin Gnocchi

INGREDIENTS:

Pumpkin, grated

500g

Plain flour

200g/ 1/2 cups

Eggs, lightly beaten 2 x 60g Salt

1 teaspoon

Freshly ground

black pepper

1 teaspoon

Fresh chives.

chopped

2 tablespoons

SETTING:

PASTA:

"9"

HANDSHAPING:

 Place the dough onto a lightly floured surface. knead lightly then divide into six portions.

Roll each portion into a long sausage shape. Cut into 1.5-2cm pieces and press each piece with the outside of a fork to give the traditional gnocchi pattern.

3. Bring a large pan of water to the boil, add the gnocchi, cook for about 3 minutes, or until pieces rise to the surface. Using a slotted spoon, drain the gnocchi and transfer to serving bowls. Serve, tossed with your favourite sauce.



CHART SHOWING SEQUENCE FOR JAM

JAM

Preheat

Knead (mix)

Total Time: 1.50 hrs

All recipes use local ingredients and Australian Standard Metric measuring tools (cup, spoons and weighing scales) for accuracy.



'Jam Setta' is a jam setting mixture. It contains the ingredient 'pectin' which is a naturally occurring substance found in fresh fruit. It is this pectin in fruit which when cooked produces a gel, The addition of 'Jam Setta' in our recipes ensure a thicker setting action occurs. This product is available at most supermarkets in 50g sachets.

Jam

Jam Cycle Instructions

For Best Results:

- Always use the exact amount of sugar, fruit and Jam Setta. Do not reduce sugar stated in recipes or use substitutes.
- Use only fresh, ripe fruit for best flavour and natural Pectin level.
- Do not puree fruit. Jam should contain pieces of fruit. Fruit can be chopped with a food processor, using a pulse action.
- Recipes should not exceed 31/a cups.
- Weigh fruit after slicing.
- Remove stems or pits from fruit before slicing.

PROCEDURE

- With kneading blade in position inside bread pan, add the chopped fruit to the bread pan.
- Add the rest of the called for ingredients in the recipe.
- Insert bread pan into the Bread Master Select, Close lid.
- 4. Press Select to setting 10 'Jam'
- 5. Press START.
- The Bread Master Select will preheat for 15 minutes before any movement occurs in the pan. After pre-heating, the jam will be heated and mixed for approximately 50 minutes. The entire cycle takes 1.05 hours.
- The Bread Master Select will beep when the cycle is complete.
- 6. Press 'STOP'.

USING OVEN MITTS remove the bread pan. Pour the hot jam into warm, dry, sterilized jars, leaving 1.25 cm from the top of the jar. Seal immediately and label. Jam will thicken upon cooling and storage.

PREPARATION OF JARS FOR JAM

Soak ars in warm water until label is easy to remove. Remove any wet cardboard liners from lids of jars. Wash jars and lids well in hot, soapy water. Rinse well in hot water, invert onto an oven tray. Do not wipe dry. Place jars into oven, heat for 15 to 20 minutes just before using at 120°C. Remove from oven using oven mitts and use immediately. Dry lids before sealing jam.



The preset timer cannot be used for the NOTE! jam setting.

Mixed Berry Jam

INGREDIENTS:

Strawberries.

250g hulled & chopped Blackberries 125g Raspberries 125g Sugar 12/o cups

Jam Setta

21/s tablespoons

SETTING:

JAM: "10"

Mango & Peach Jam

INGREDIENTS:

Peaches, peeled, deseeded &

finely chopped 250g

Mango flesh, finely

chopped 250g Sugar 11/2 cups

Jam Setta 21/2 tablespoons

SETTING:

JAM: "10"

Spiced Pear & Plum Jam

INGREDIENTS:

Plums, deseeded

& finely chopped 250a

Pears, peeled & finely

chopped 250g Sugar 1º/s cups Mixed spice 1/4 teaspoon Jam Setta 21/2 tablespoons

SETTING:

"10" JAM:

Tomato & Pineapple Jam

INGREDIENTS:

Tomatoes, peeled,

seeded &

300g finely chopped

Pineapple flesh, finely

chopped 200g Sugar 11/e cups

Jam Setta

SETTING:

JAM: "10"

Strawberry Jam

INGREDIENTS:

Strawberries. hulled & chopped

500g 1º/s cups

Sugar Jam Setta

21/z tablespoons

21/s tablespoons

SETTING:

JAM:

"10"

Plum Jam

INGREDIENTS:

Blood plums, peeled,

deseeded & chopped 600a Sugar 11/2 cups

Jam Setta

2 / tablespoons

SETTING:

JAM: "10"

Apricot & Pineapple Jam

INGREDIENTS:

Dried apricots, roughly

chopped 300g

Pineapple flesh, finely

chopped 200g

11/2 cups Sugar

Jam Setta 2 tablespoons

SETTING:

"10" JAM:

Two Fruit Marmalade

INGREDIENTS:

Oranges, thinly sliced 425g
Lemons, thinly thinly 125g
Sugar 12/2 cups
Jam Setta 2 tablespoons

SETTING:

JAM: "10"

Kiwi Fruit Jam

INGREDIENTS:

Kiwi fruit, peeled

& sliced 500g
Sugar 1½ cups
Jam Setta 2½ tablespoons

SETTING:

JAM: "10"

Create Your Own Jam Recipes

INGREDIENTS:

500g chopped fruit of your choice 11/2 - 12/3 cups of sugar, depending on the pectin level of the fruit 21/2 tablespoons Jam Setta

SETTING:

JAM: "10"

PROCEDURE

- 1. Place fruit, sugar and Jam Setta into bread pan.
- 2. Press 'START/STOP'.



The gel, texture, flavour, aroma and colour of the cooled jam may vary when compared to commercially made jams. The natural pectin, ripeness, juiciness etc. of the fruit used will influence the finished product.

Glazes &

The following Glazes and Butters are easy and quick to prepare and will enhance the flavour of your breads.

PROCEDURE

Place ingredients into a small mixing bowl and combine well. After baking, press 'STOP'. Remove bread from Bread Master Select and bread pan. Coat top of loaf with glaze. Cool on rack.

Chocolate Glaze

- 2 tablespoons butter or margarine, melted
- 1/4 cup icing sugar
- 1 tablespoon cocoa
- 1/2 teaspoon vanilla essence
- 1 tablespoon milk

Combine ingredients until smooth and thin enough to drizzle.

Hot Cross Bun And Brown Bun Glaze


- 1/2 cup loing sugar
- 1/4 teaspoon allspice
- 1/4 teaspoon ground cinnamon
- 1 tablespoon water

Combine ingredients until smooth and thin enough to drizzle.

Citrus Glaze

- 1/2 cup loing sugar
- 1 teaspoon grated lemon rind
- 1 teaspoon grated orange rind
- 1 tablespoon lemon or orange juice

Combine ingredients until smooth and thin enough to drizzle.

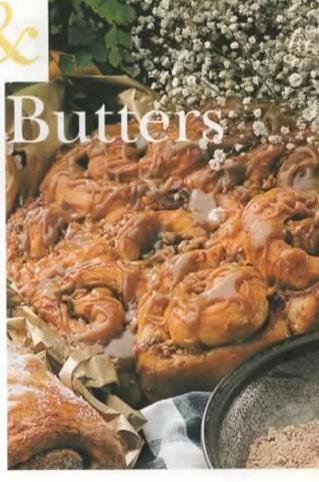

Vanilla Glaze

- 1/2 cup icing sugar
- // teaspoon vanilla essence
- 2 teaspoons milk

Combine ingredients until smooth and thin enough to drizzle.

Gelatine Glaze

- 3 tablespoons water
- 11/2 tablespoons sugar
- 3 teaspoons gelatine

Place ingredients in a small saucepan, stir over a low heat until sugar and gelatine dissolves. Brush over hot bread.

Coconut Icing

- 125g // cup icing sugar
- 3 leaspoons butter
- / teaspoon vanilla essence
- 4 tablespoons desiccated coconut
- 3-4 tablespoons hot water

Combine icing sugar, butter, vanilla essence, coconut and enough water to mix to a thin consistency. Spread icing on buns etc. while they are still hot.

Ginger-Pecan Butter

125g butter

11/s tablespoons ground ginger

1/2 cup pecans, finely ground

1 tablespoon brown sugar

/ teaspoon allspice

Garlic Butter

125g butter, softened 2 garlic cloves, crushed Salt & pepper

Lemon Butter

125g butter, softened

2 teaspoons lemon juice

1 teaspoon finely grated lemon rind Cayenne pepper

Herb Butter

125g butter, softened 2 tablespoons chopped fresh herbs eg., parsley, chives, rosemary, basil Salt and pepper

Mustard Butter

125g butter, softened

3 tablespoons prepared mustard

1/2 teaspoon black pepper

Prepackaged Bread Mixes

These convenient BREAD MIXES are available nationally in supermarkets and at some bulk outlets. They are available in various sized packaging and should not be confused with BREAD FLOUR. Bread mixes contain high-protein bread flour, sugar, salt, milk powder, oil and other ingredients such as bread improvers. Usually only the addition of water and yeast is necessary, however some results are improved by adding extra oil.



Properties of the bread mixes can alter on a seasonal or storage basis, so it may be necessary to adjust the water and flour ratio. So check the dough in the first ten minutes of kneeding by opening the lid - if the dough is too dry add 1-2 teaspoons of water extra, if the dough is too sticky add up to a tablespoon of bread mix extra. The dough should be forming into a smooth round ball.


White Prepackaged Bread Mix Recipes

All recipes use local ingredients and Australian Standard Metric measuring tools (cup, spoons and weighing scales) for accuracy in producing 750g and Ikg loaves of bread.

PROCEDURE

- Place ingredients into bread pan in the exact order listed in the recipe.
- Wipe spills from outside of bread pan.
- Lock the bread pan into position in the baking chamber and close the lid.
- Press SELECT button to setting as specified in the recipes below.
- 5. Press LOAF button to 750g if required.
- Press 'CRUST' to Dark or Light setting if required.
- 7. Press START.

After baking, press STOP. Remove bread from Bread Master Select and bread pan. Cool on rack.

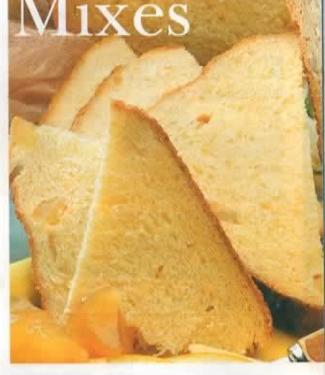



Basic or Basic Rapid setting can be used for the white bread mix recipes. However loaves baked on the Rapid setting will not be as highly risen as those baked on the Basic setting. Light, Medium or Dark crust may be selected as preferred.

Defiance White Bread Mix

 INGREDIENTS:
 1kg
 750g

 Water
 350ml
 250ml

 Bread mix
 600g/ 4 cups
 450g/ 3 cups

 Defiance yeast
 1½ teaspoons
 1½ teaspoons

SETTING:

BASIC: Light, Medium or Dark

Kitchen Collection White Bread Mix

 INGREDIENTS:
 1kg
 750g

 Water
 330ml
 270ml

 Proof mix
 600g/4 curs
 450g/3

Bread mix 600g/ 4 cups 450g/ 3 cups

Kitchen

Collection yeast 11/4 teaspoons 11/4 teaspoons

SETTING:

BASIC: Light, Medium or Dark

The Old Grain Mill White Bread Mix

 INGREDIENTS:
 1kg
 750g

 Water
 375ml
 270ml

 Oil
 2 tablespoons
 1 tablespoon

 Bread mix
 600g/ 4 cups
 480g/ 31/4 cups

Bread mix Old Grain Mill

yeast 6g/1 sachet 4g

SETTING:

BASIC: Light, Medium or Dark

Grain Prepackaged Bread Mixes

All recipes use local ingredients and Australian Standard Metric measuring tools (cup, spoons and weighing scales) for accuracy in producing 750g and 1kg loaves of bread.

PROCEDURE

- Place ingredients into bread pan, in the exact order listed in the recipe.
- 2. Wipe splls from outside of bread pan.
- Lock the bread pan into position in the baking chamber and close the lid.
- Press 'SELECT' button to desired setting as specified in recipes below.
- 5. Press 'LOAF' to 750g setting if required.
- Press 'CRUST' button to desired setting as specified in recipes below.
- 7. Press 'START'

After baking, press 'STOP', Remove bread from Bread Master Select and bread pan, Cool on rack.



Wholewheat or Wholewheat Rapid setting can be used for grain bread mix recipes. However loaves baked on the Rapid setting will not be as highly risen as those baked on the Basic setting. Light, medium or dark crust may be selected as preferred.

Defiance Grain Bread Mix

 INGREDIENTS:
 1kg
 750g

 Water
 310ml
 270ml

 Bread Mix
 600g/ 4 cups
 450g/ 3 cups

 Defiance yeast
 11/2 teaspoons
 11/4 teaspoons

SETTING:

BASIC: Light, Medium or Dark

Kitchen Collection Grain Bread Mix

 INGREDIENTS:
 1kg
 750g

 Water
 350ml
 270ml

 Bread mix
 600g/ 4 cups
 450g/ 3 cups

 Kitchen
 Collection yeast
 2 teaspoons

 1º/4 teaspoons
 1º/4 teaspoons

SETTING:

BASIC: Light, Medium or Dark

The Old Grain Mill Grain Bread Mix

INGREDIENTS: 1kg 750g 375ml 270ml Water 2 tablespoons 1 tablespoon Oil 480g/31/4 cups 600g/ 4 cups Bread mix Old Grain Mill

6g/1 sachet 4g yeast

SETTING:

BASIC: Light, Medium or Dark

TIP! A lighter textured bread can be achieved by using the Basic setting. Substituting a tablespoon of water with a tablespoon of oil will give a more tender crumb and browner crisper crust.

Wholemeal Prepackaged Bread Mixes

All recipes use local ingredients and Australian Standard Metric measuring tools (cup, spoons and weighing scales) for accuracy in producing 750g and 1kg loaves of bread.

PROCEDURE

- 1. Place ingredients into bread pan, in the exact order listed in the recipe.
- 2. Wipe spills from outside of bread pan.
- 3. Lock the bread pan into position in the baking chamber and close the lid.
- 4. Press 'SELECT' to the desired setting as specified in recipes below.
- 5. Press 'LOAF' to 750g If required.
- 6. Press 'CRUST' to the desired setting as specified in recipes below.
- 7. Press 'START'

After baking, press 'STOP', Remove bread from Bread Master Select and bread pan. Cool on rack.



NOTE! Wholewheat or Wholewheat Rapid setting can be used for wholemeal bread mix recipes. Light, Medium or Dark crust may be selected as preferred.

Defiance Wholemeal Bread Mix

750g INGREDIENTS: 1kg 270ml Water 400ml 600g/ 4 cups 450g/ 3 cups Bread mix 1º/4 teaspoons Defiance yeast 2 teaspoons

SETTING:

WHOLEWHEAT: Light, Medium or Dark

Kitchen Collection Wholemeal Bread Mix

INGREDIENTS: 1kg 750g 350ml 290ml Water 600g/ 4 cups 450g/ 3 cups Bread mix Kitchen

Collection yeast 2 teaspoons 11/a teaspoons

SETTING:

WHOLEWHEAT: Light, Medium or Dark

The Old Grain Mill Wholemeal Bread Mix

 INGREDIENTS:
 1kg
 750g

 Water
 375ml
 300ml

 Oil
 1 tablespoon
 1 tablespoon

Bread mix 600g/ 4 cu

600g/ 4 cups 500g/ 31/2 cups

Old Grain Mill

yeast 6g/1 sachet 6g/1 sachet

SETTING:

WHOLEWHEAT: Light, Medium or Dark

The Old Grain Mill Rye Bread Mix

 INGREDIENTS:
 1kg
 750g

 Water
 375ml
 290ml

 Oll
 2 tablespoons
 1 tablespoon

 Bread mix
 600g/ 4 cups
 480g/ 3½ cups

Old Grain Mill

yeast 6g/1 sachet 4g

SETTING:

WHOLEWHEAT: Light, Medium or Dark

Fruit Bun Loaf Prepackaged Bread Mixes

All recipes use local ingredients and Australian Standard Metric measuring tools (cup, spoons and weighing scales) for accuracy in producing 750g and 1kg loaves of bread,

PROCEDURE

- Place ingredients into bread pan, in the exact order listed in the recipe.
- Wipe spills from outside of bread pan.
- Lock the bread pan into position in the baking chamber and close the lid.
- Press 'SELECT' to the desired setting as specified in the recipes below.
- 5. Press 'LOAF' to 750g setting if required.
- Press 'CRUST' to the desired setting as specified in the recipes below.
- 7. Press 'START'

After baking, press 'STOP'. Remove bread from Bread Master Select and bread pan. Cool on rack.



Sweet, Basic or Basic Rapid setting can be used for fruit bun loaf bread mix recipes. Light, Medium or Dark crust may be selected as preferred. However, due to the higher sugar content provided by the dried fruit it is recommended to use the Medium crust setting.

Defiance Sweet Bun Loaf Bread Mix

 1kg
 750g

 Water
 330ml
 250ml

 Bun mix
 600g/ 4 cups
 450g/3 cups

 Deflance yeast
 2 teaspoons
 11/3 teaspoons

ADD AT BEEP:

Mixed dried fruit 200g/ 1 cup 150g/ 1/4 cup

SETTING:

SWEET BREAD: Light, Medium, Dark